

NL MONTAGEVOORSCHRIFT


D MONTAGE-ANLEITUNG

F MOUNTING INSTRUCTIONS


E INSTRUCTIONS DE MONTAGE

VRVK-R

VRVK-R 16

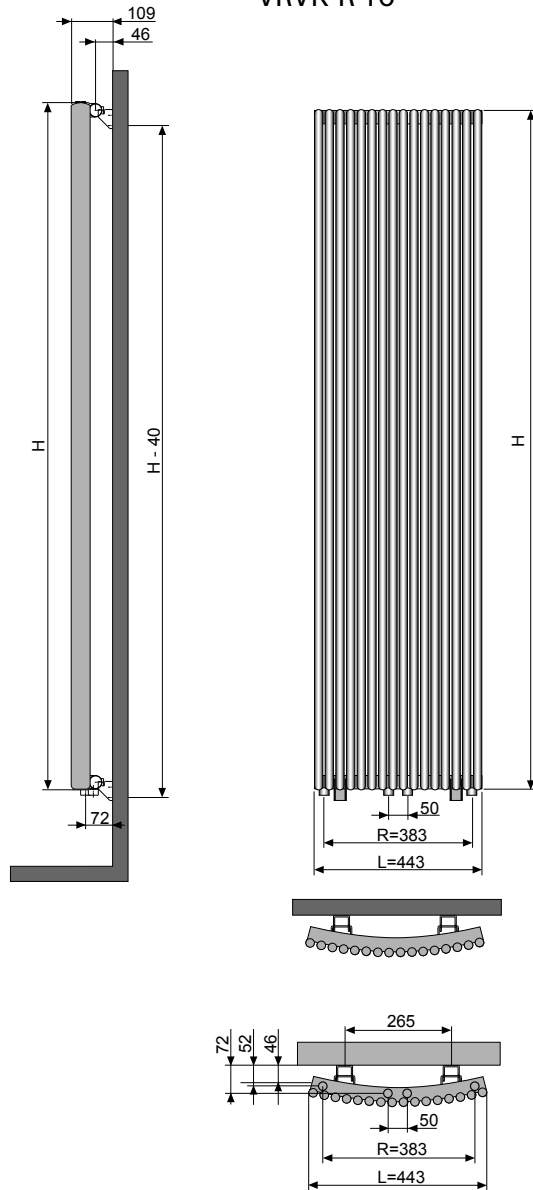

VRVK-R 18

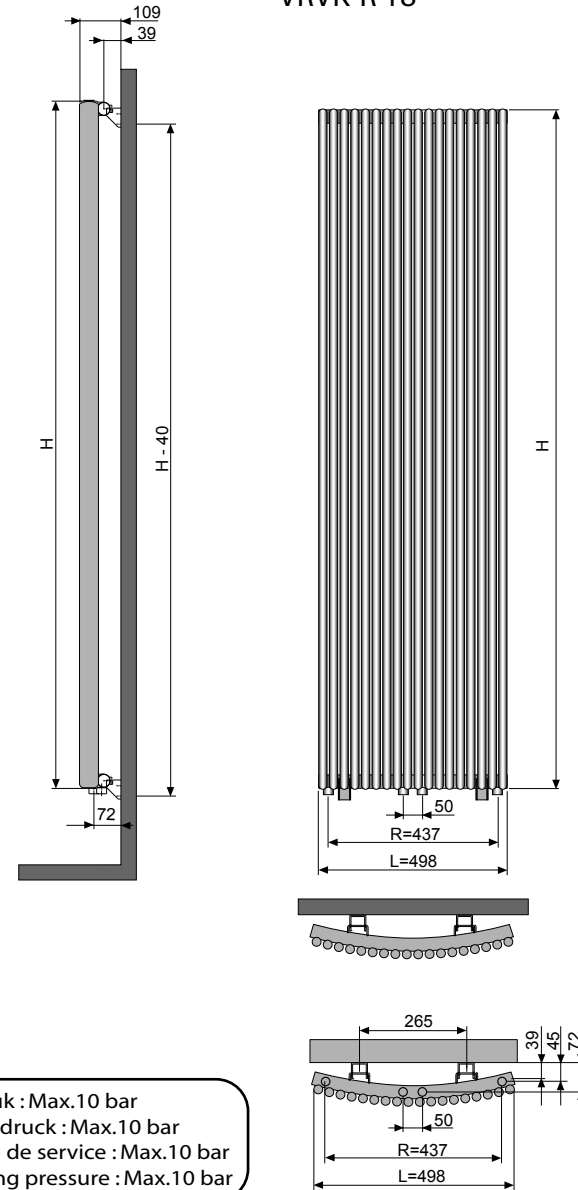

Werkdruk : Max.10 bar
Betriebsdruck : Max.10 bar
Pression de service : Max.10 bar
Operating pressure : Max.10 bar