

i

Achtung:
 Cris de perçage:
 Impulsione:
 Knockstand:
 Drilling distance: $\rightarrow 195 \leftarrow$

Wasseranschlüsse für Dusche/WC sind
 vorbereitet.
 Prepared water connection for
 shower toilet.
 Collocazioni acqua per un water
 WC doccia è già preparato.
 Wasseranschlüsse für Dusche/WC
 sind vorbereitet.
 Le forniere permettono le raccordi
 per un water WC doccia sei già

1
 2
 3
 4
 5
 6
 7
 8

1
 2
 3

260.298.001
 816.413.001

001.051.010.011

1




$+05$
 WA
 195
 30

2


195
 05
 $\varnothing 16 \text{ mm}$

3

2
 1

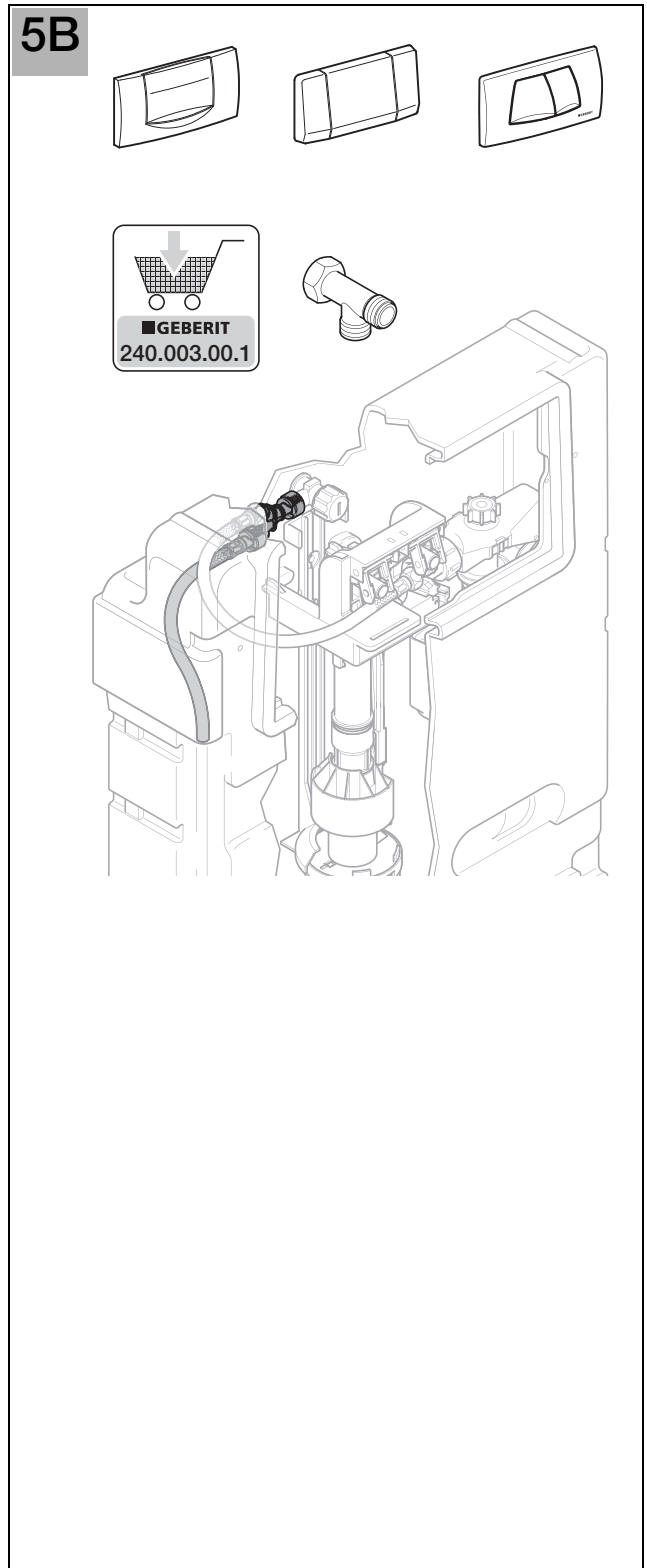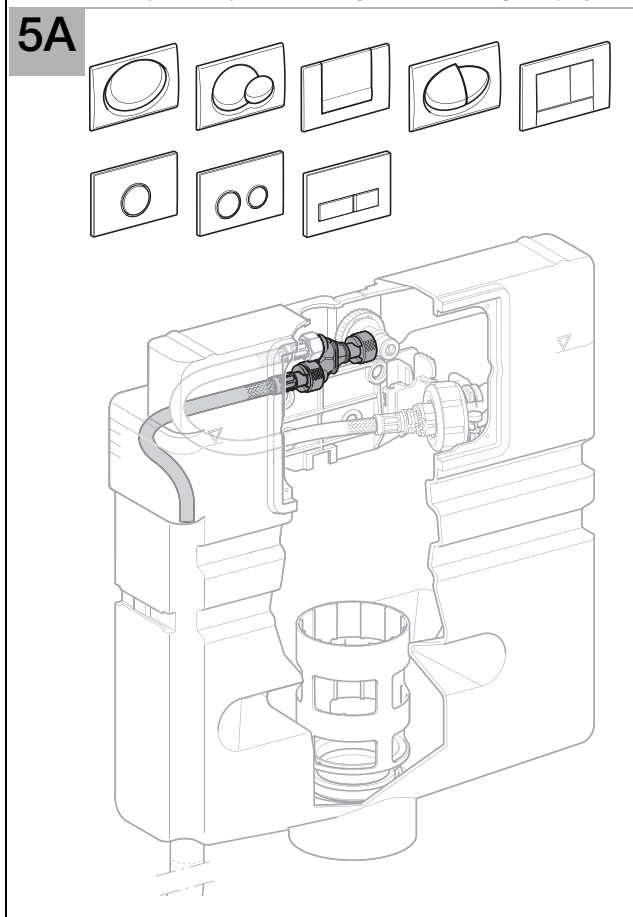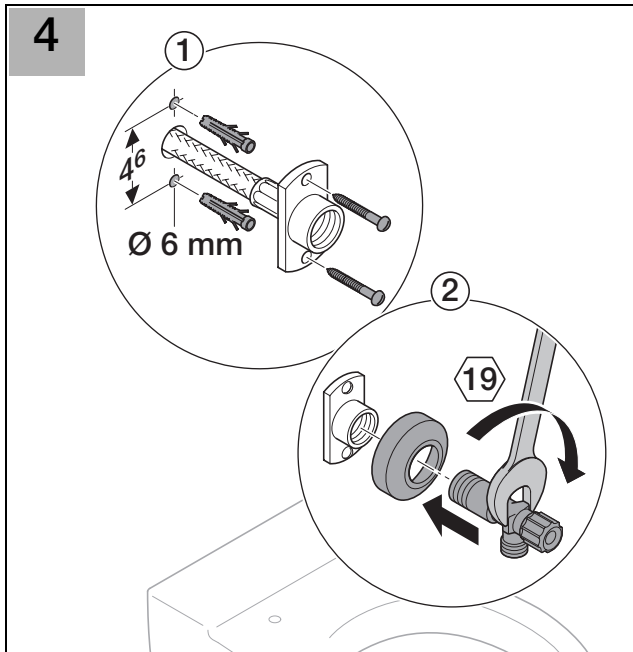

6 Balena 4000

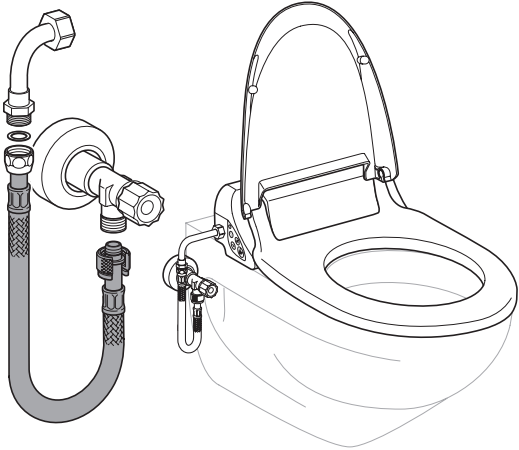

Balena 6000

