


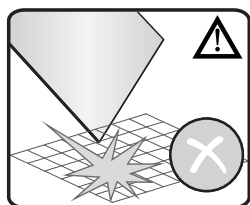
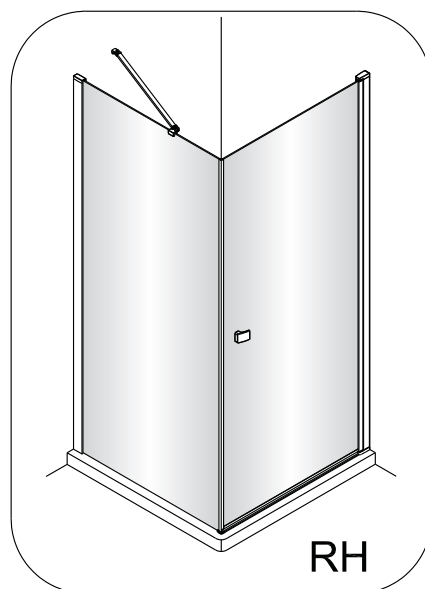


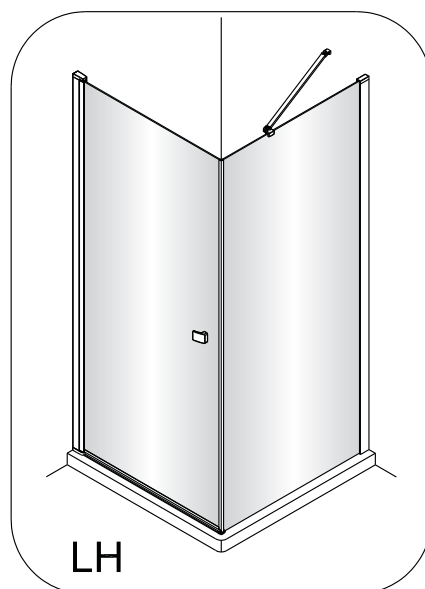






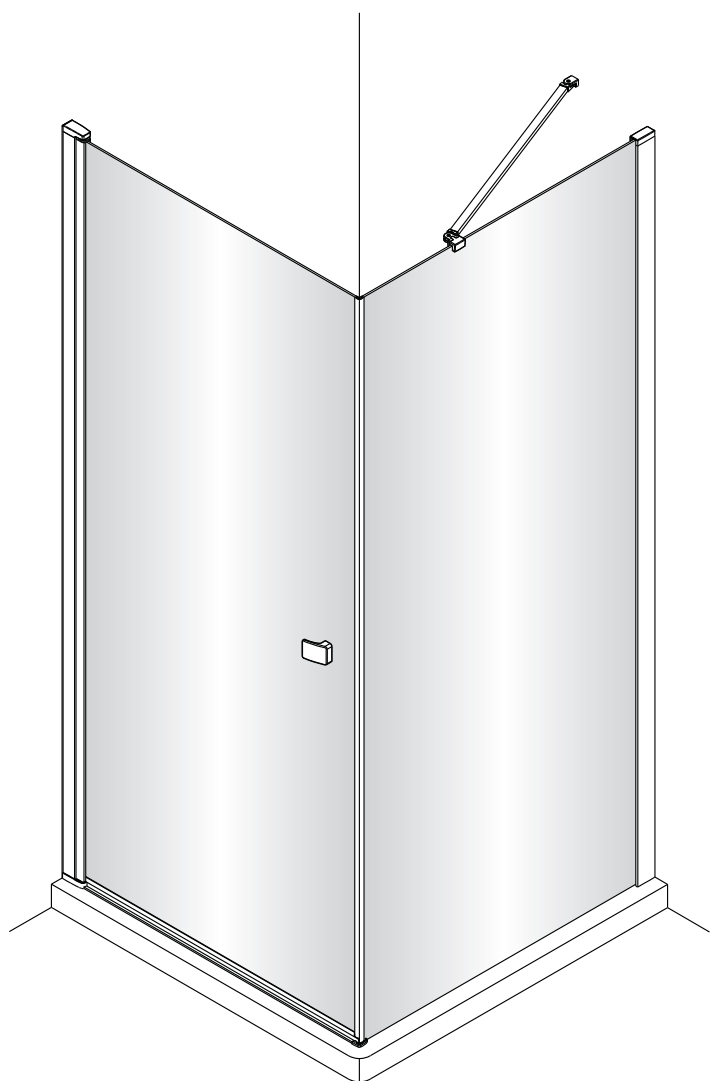

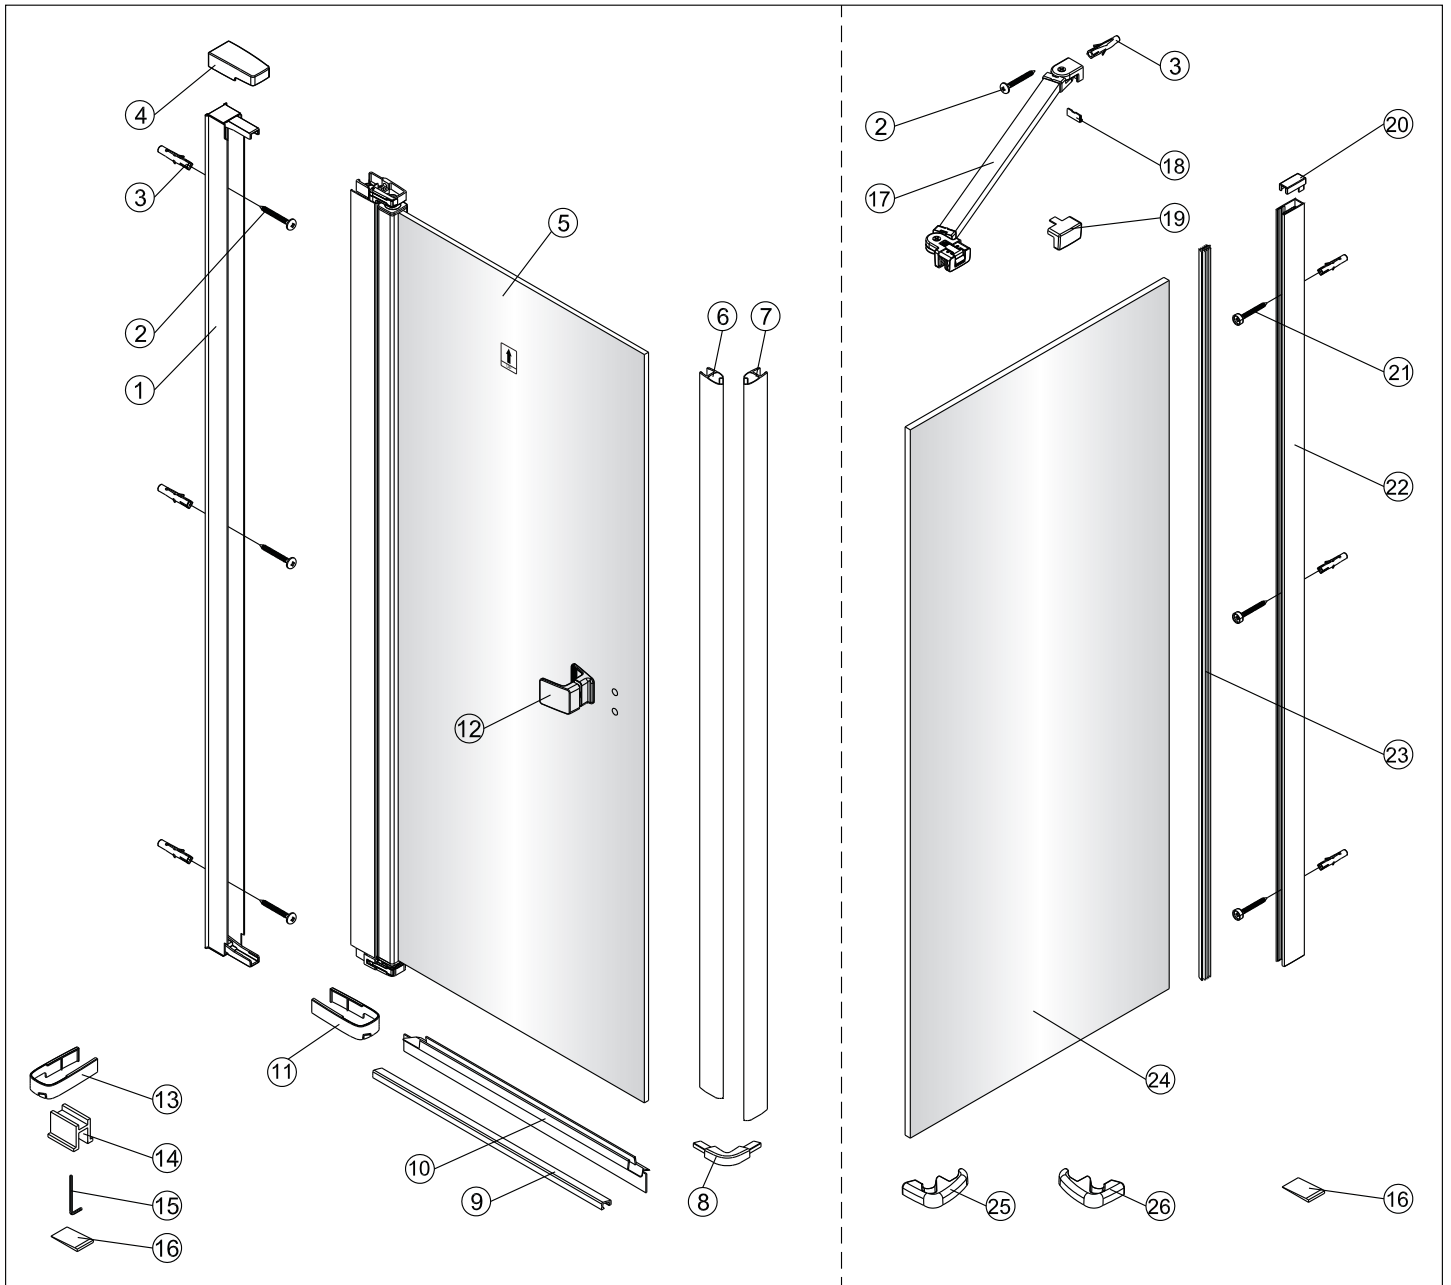














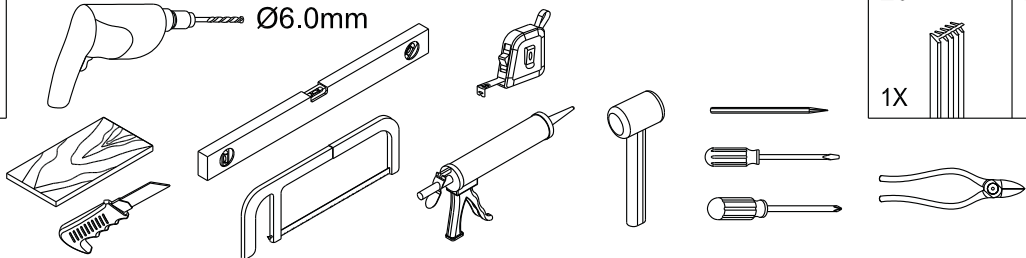


QXP80X / QXP90X / QXP10X + QXR80X / QXR90X / QXR10X Instruction Manual






CAUTION! Tempered glass, handle with care!
No collision to the four corners in case of crazing.




1  1X	2  3X ST4X40	3  3X	4  1X	5  1X	6  1X L=1914	7  1X	8  1X	9  1X	10  1X	11  1X	12  1X	13  1X	14  1X	15  1X 3mm	16  4X	17  1X	18  1X	19  1X	20  1X	21  3X ST4X40	22  1X	23  1X	24  1X	25  1X	26  1X
																									

	A(cm)
80	77~79
90	87~89
100	97~99




	B(cm)
80	76.2~78.2
90	86.2~88.2
100	96.2~98.2

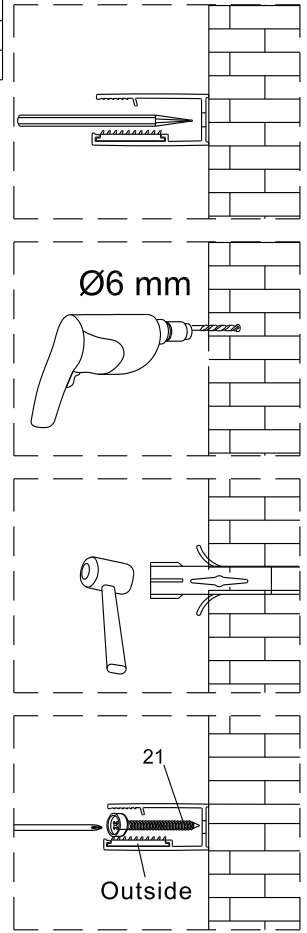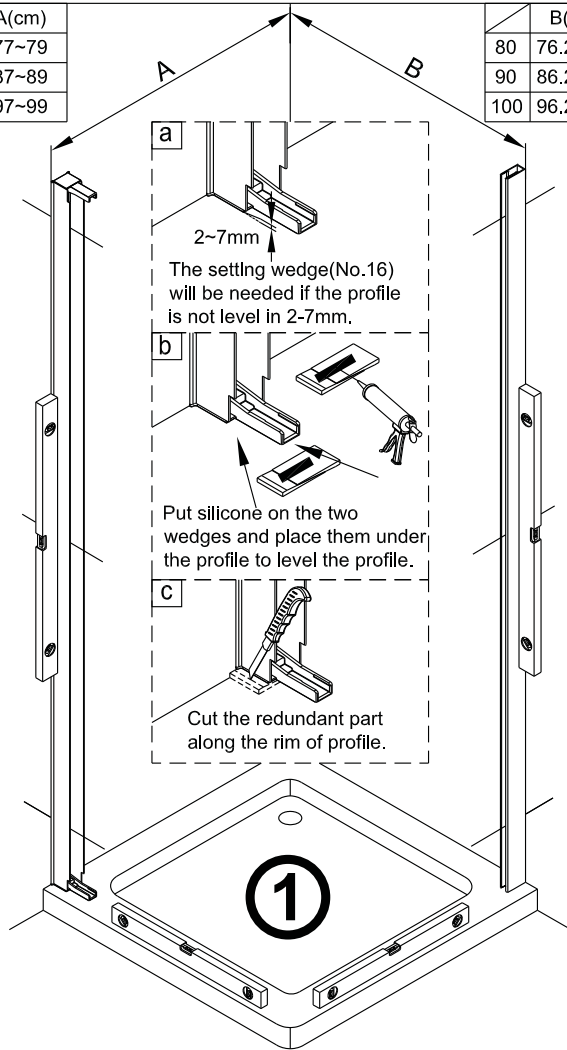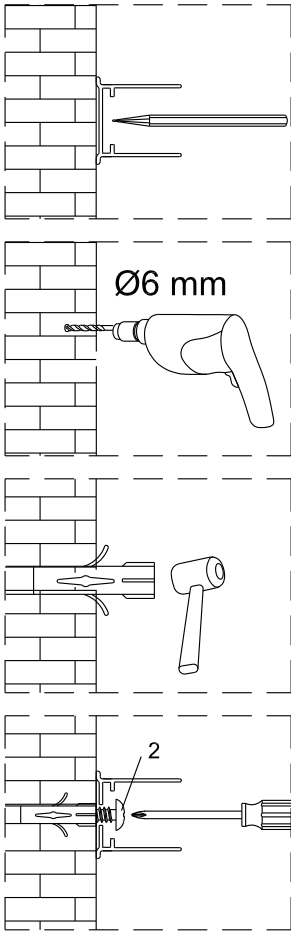

The bottom part of wall profile should be tightly stick to the tray.

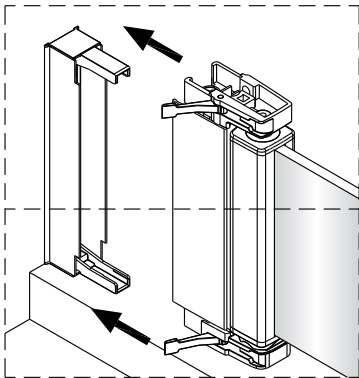


②

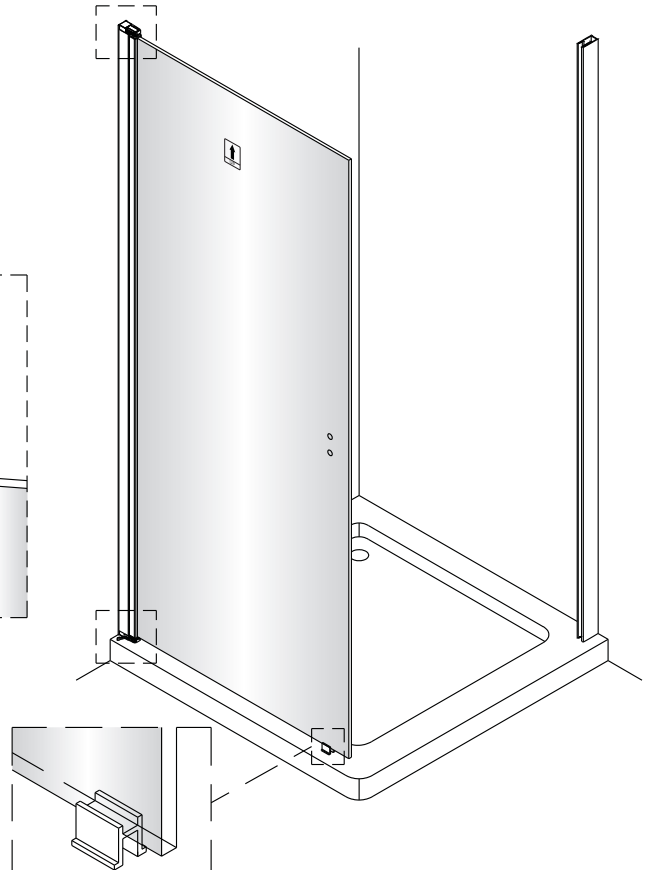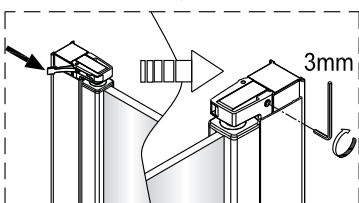
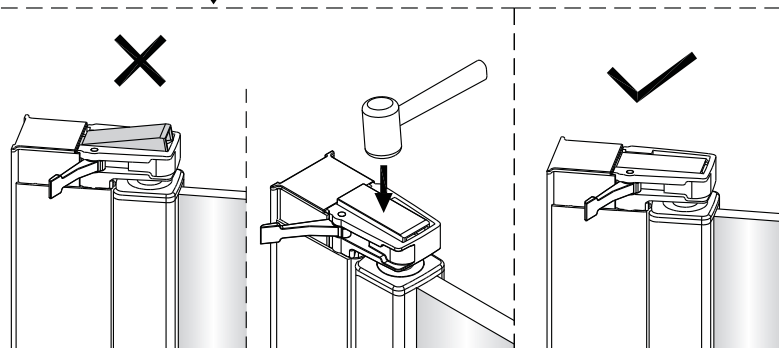






This side with easy clean treatment, please put this side to inside of shower enclosure.



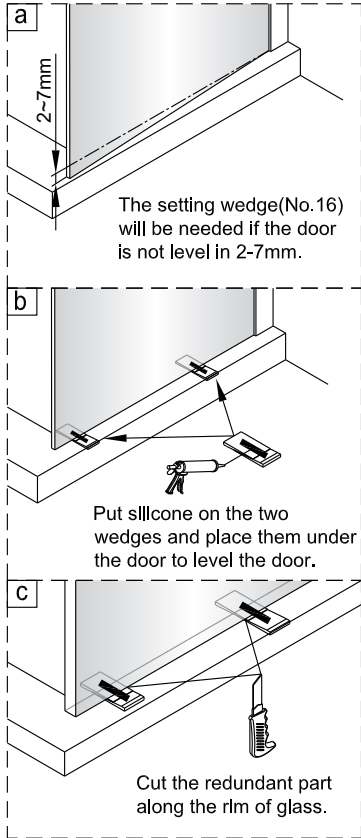


3

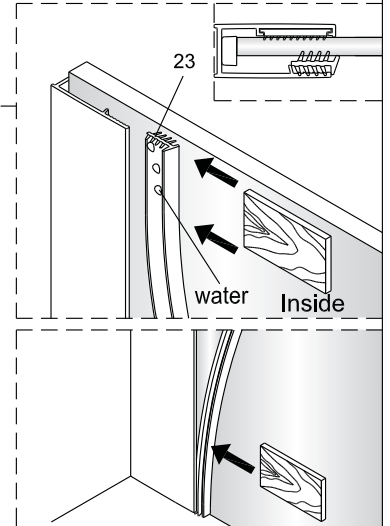
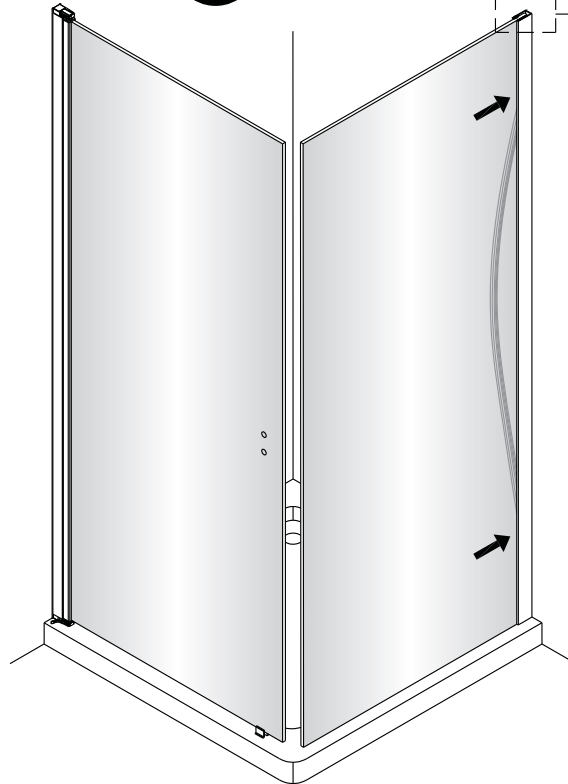


4

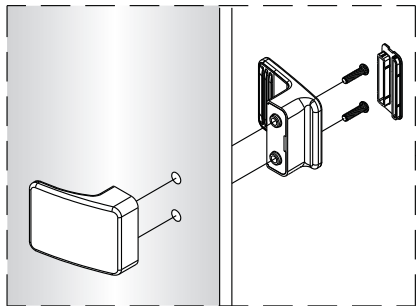
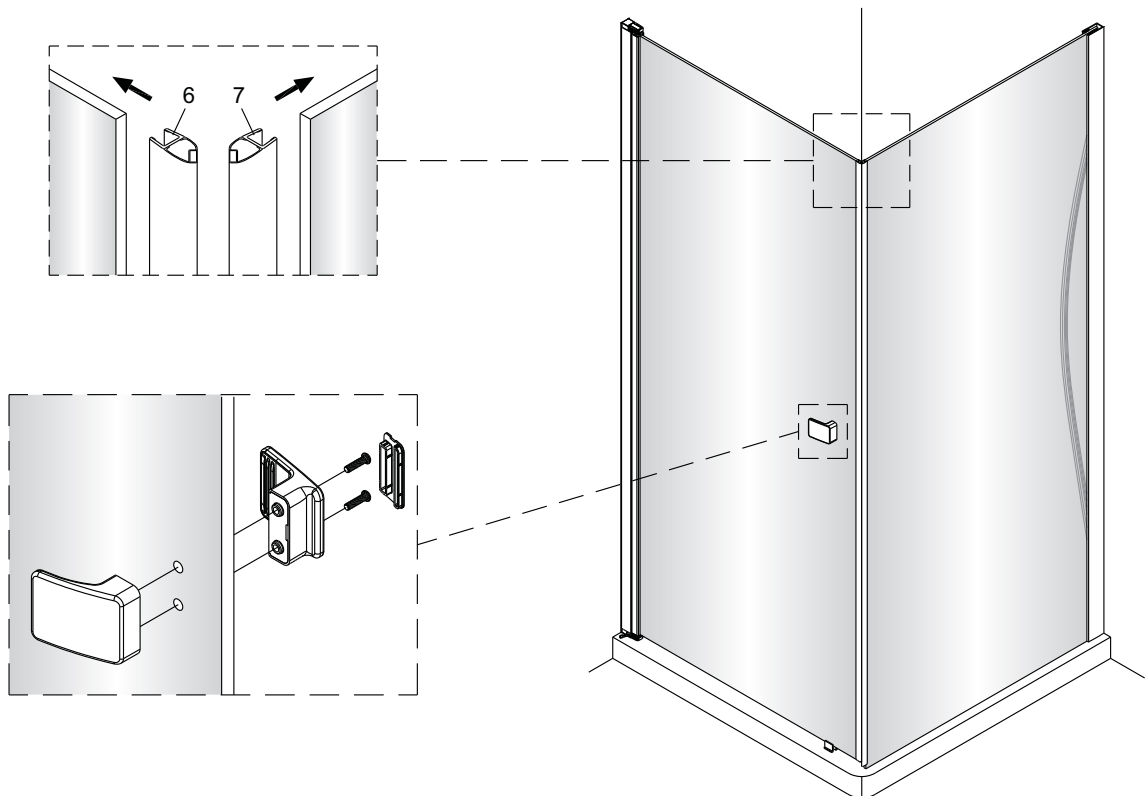


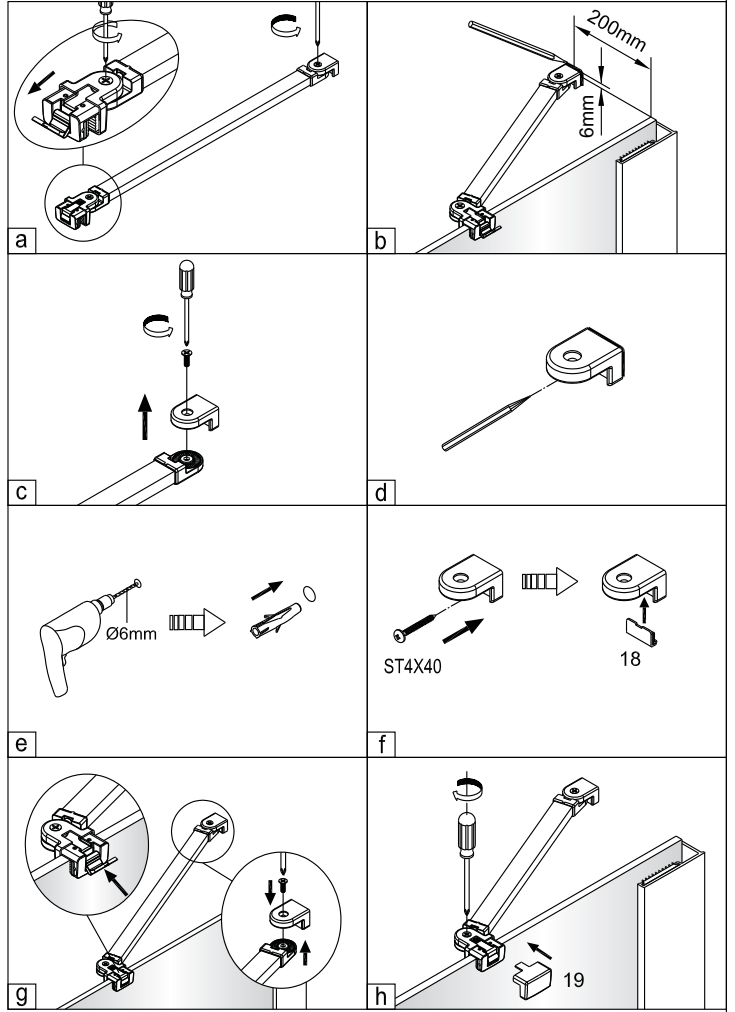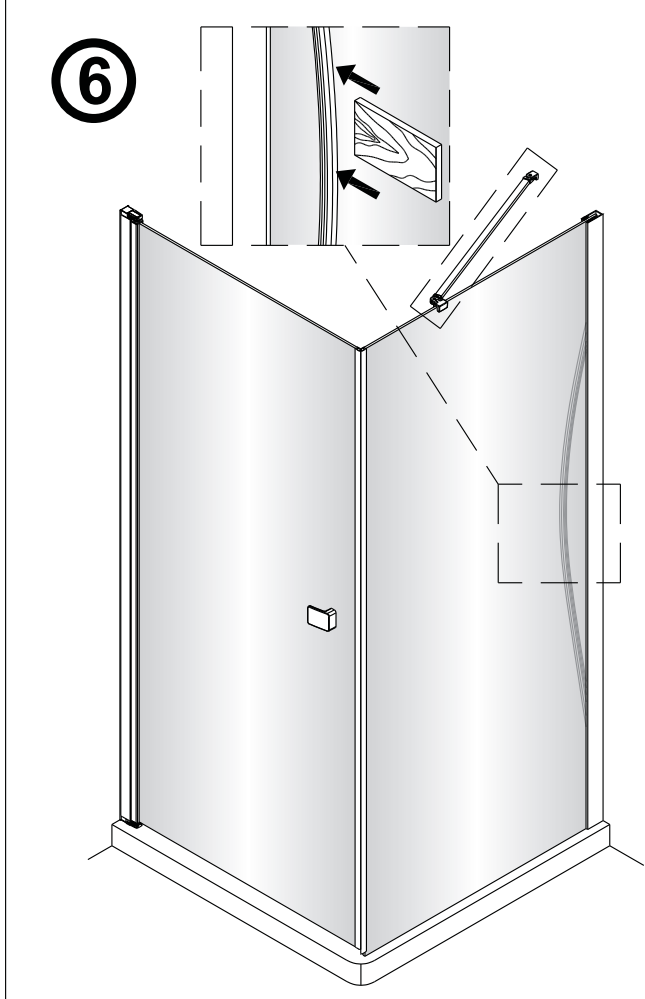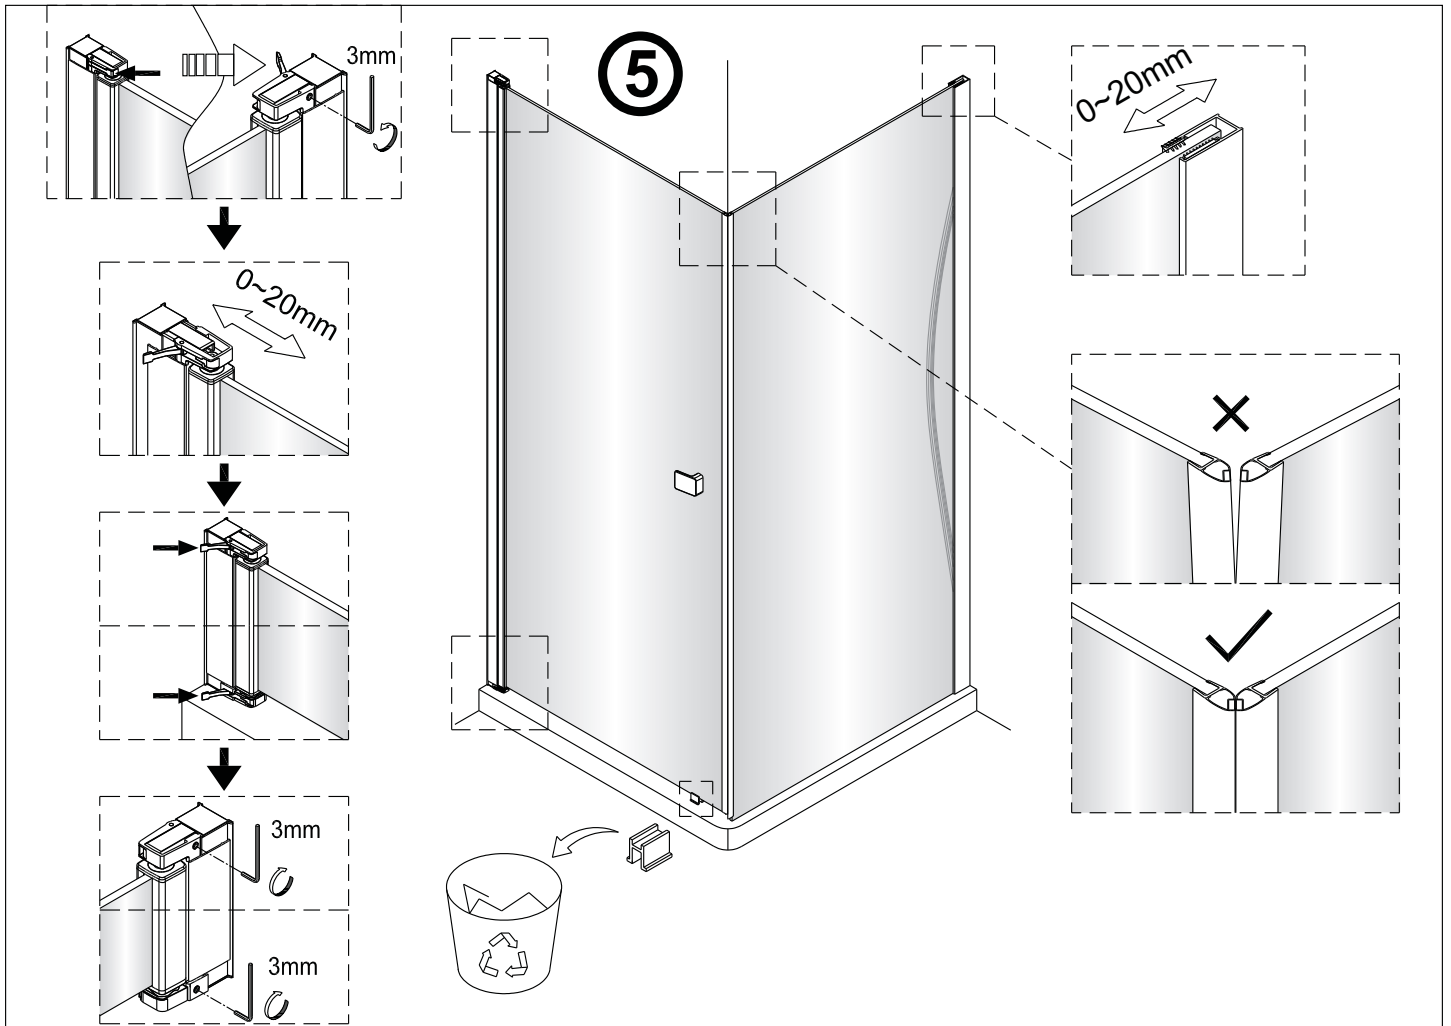

7

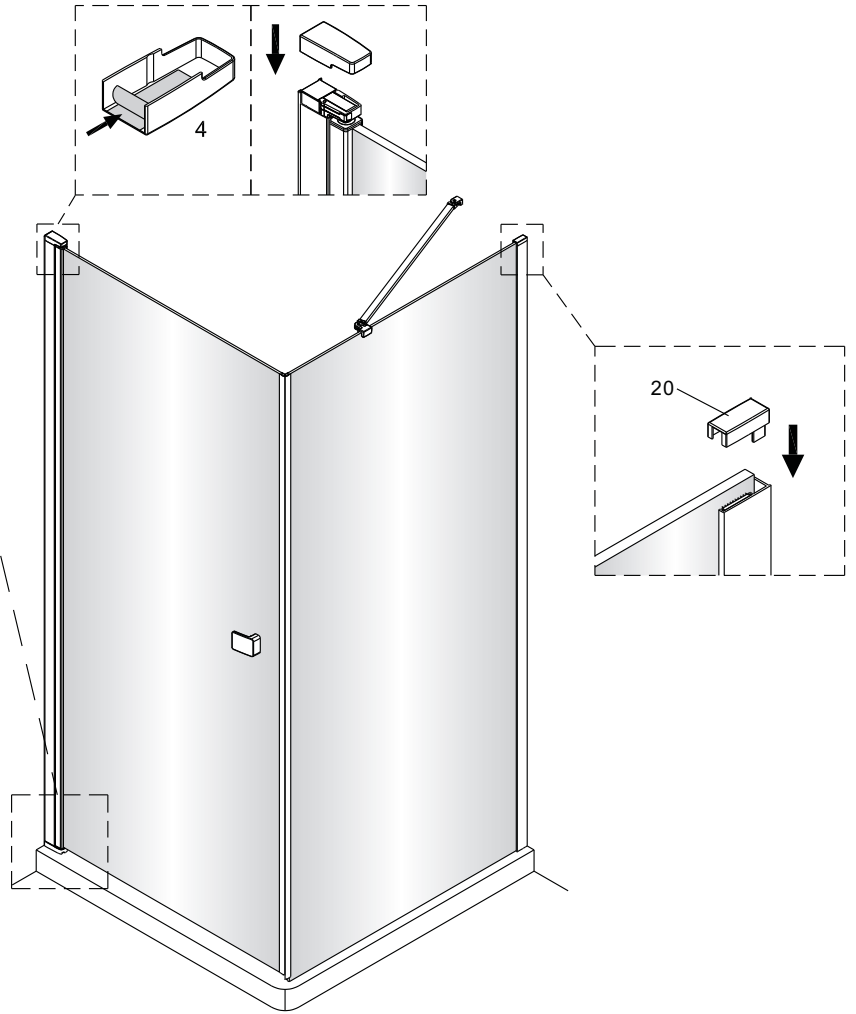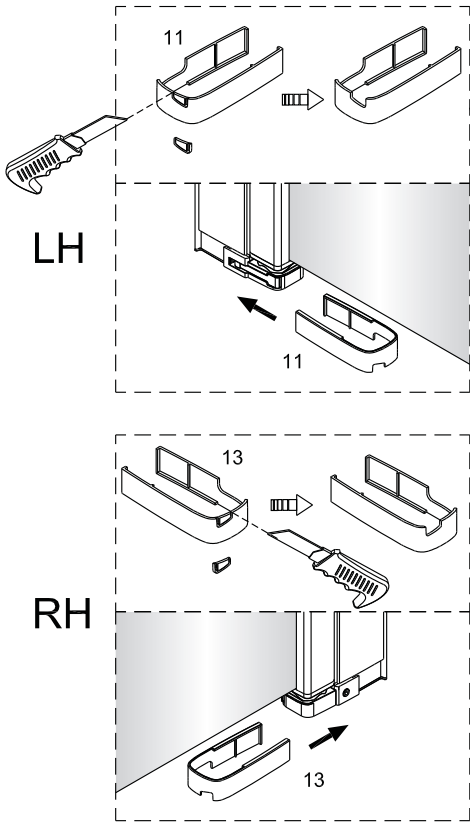

8

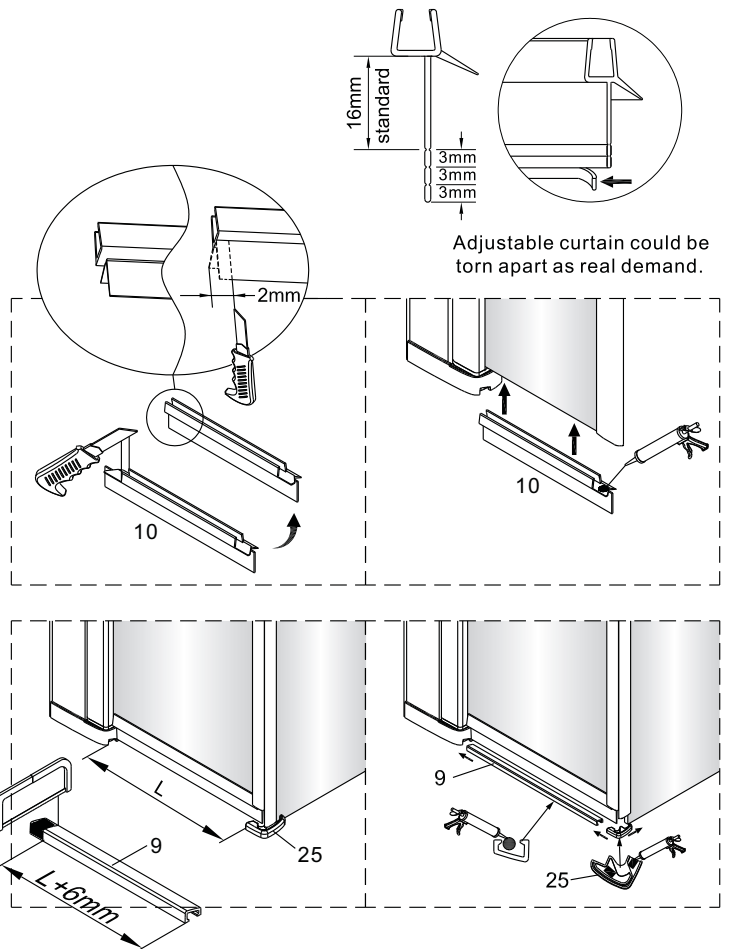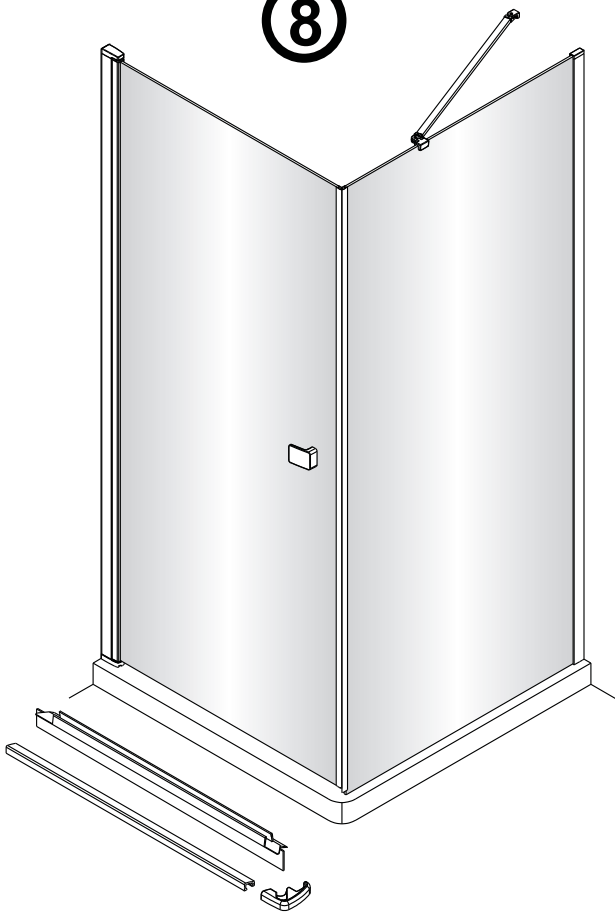

9

