


INSTALLATIE VOORSCHRIFT

SIDE PANEL mat-black






Zonder NANO

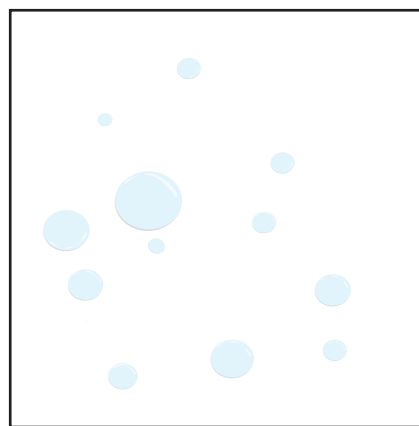


NANO

beide zijden NANO behandeld








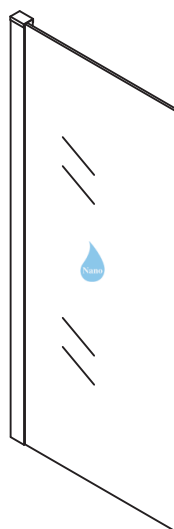













beide zijden NANO behandeld

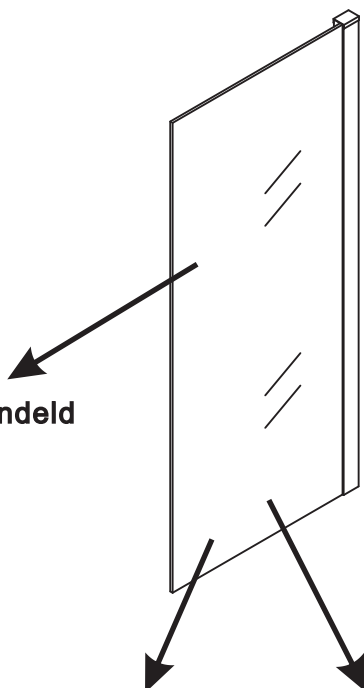

NANO garantie: 2 jaar bij normaal gebruik
LET OP: gebruik geen grove scherpe voorwerpen, zoals
schuursponsjes of staalwol om het glas schoon te maken.

1

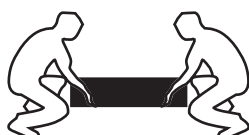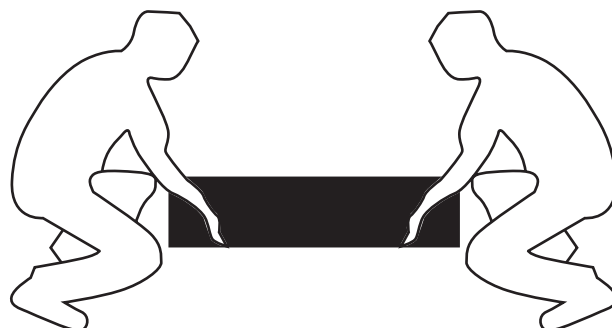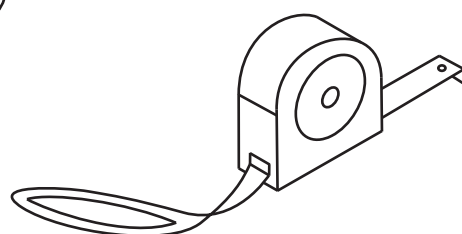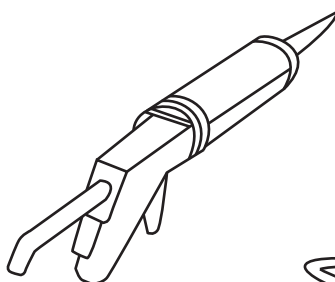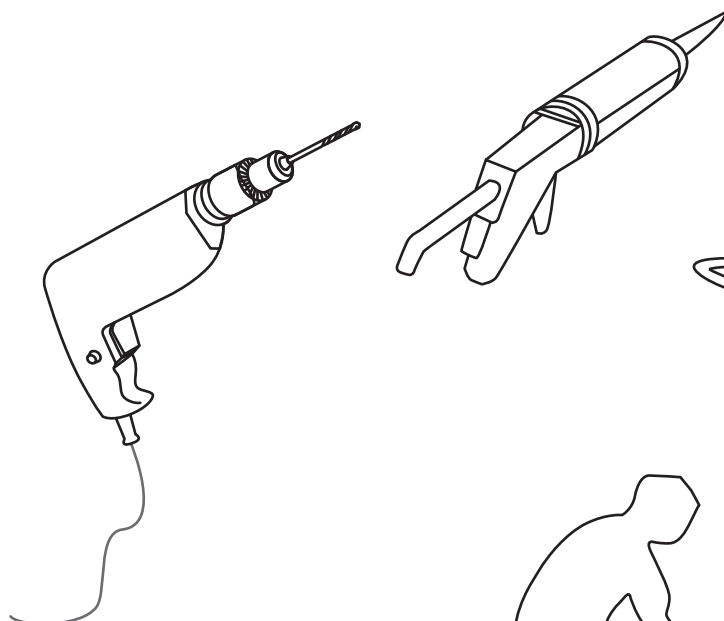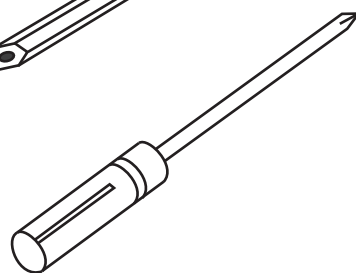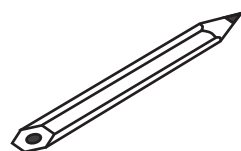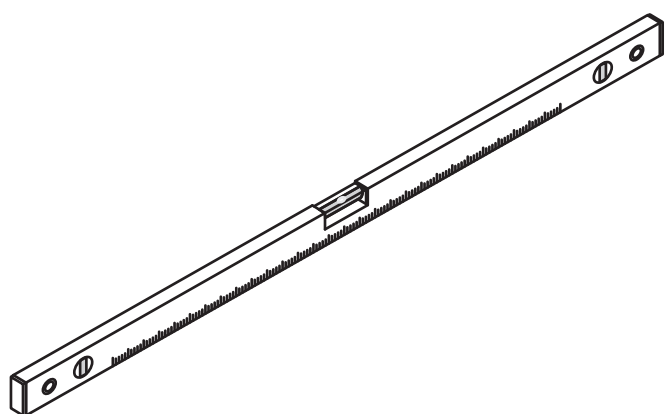

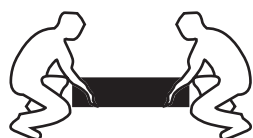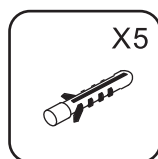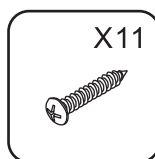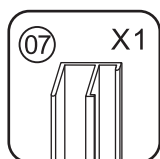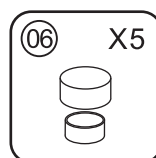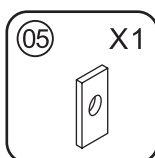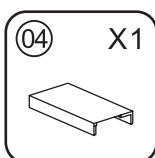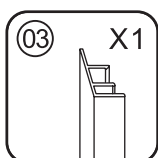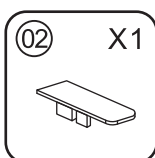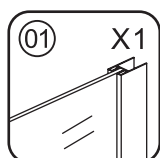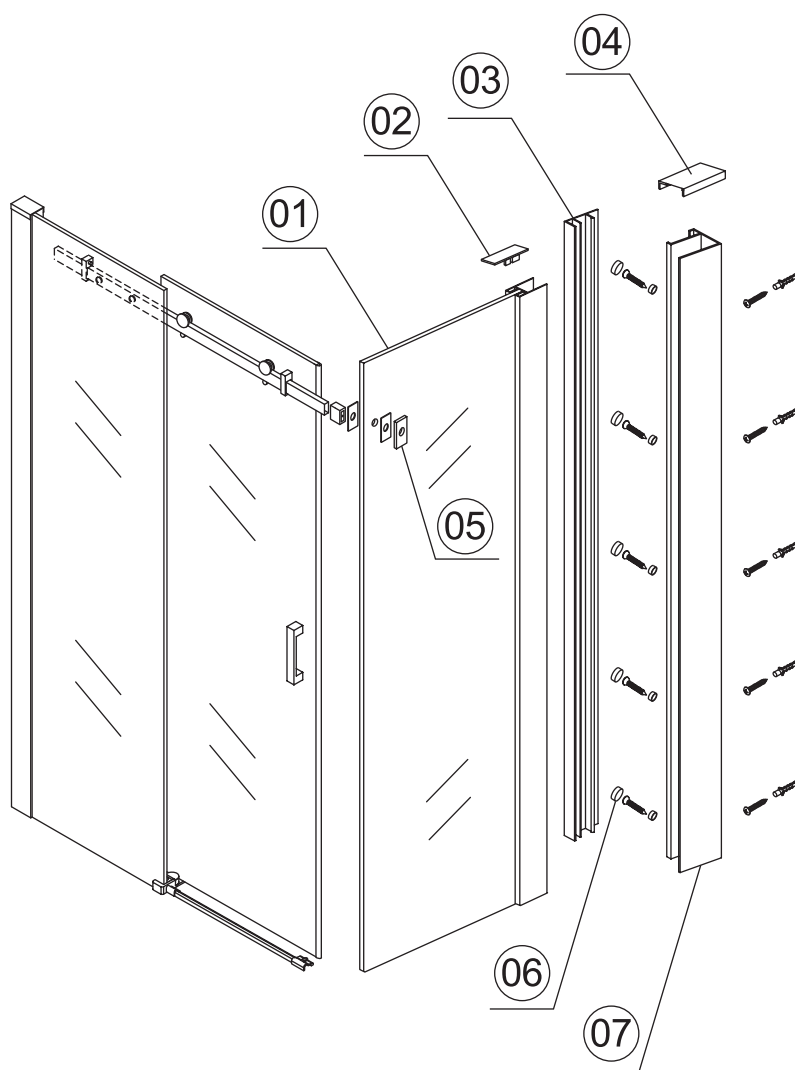

760(1200x800)
760(1400x800)
760(1600x800)
760(1700x800)

860(1200x900)
860(1400x900)
860(1600x900)
860(1700x900)

960(1200x1000)
960(1400x1000)
960(1600x1000)
960(1700x1000)

1060(1200x1100)
1060(1400x1100)
1060(1600x1100)
1060(1700x1100)

1160(1200x1200)
1160(1400x1200)
1160(1600x1200)
1160(1700x1200)

1360(1200x1400)
1360(1400x1400)
1360(1600x1400)
1360(1700x1400)

1168(1200x800)
1368(1400x800)
1568(1600x800)
1668(1700x800)






1168(1200x900)
1368(1400x900)
1568(1600x900)
1668(1700x900)



1168(1200x1000)
1368(1400x1000)
1568(1600x1000)
1668(1700x1000)

1168(1200x1100)
1368(1400x1100)
1568(1600x1100)
1668(1700x1100)




1168(1200x1200)
1368(1400x1200)
1568(1600x1200)
1668(1700x1200)

1168(1200x1400)
1368(1400x1400)
1568(1600x1400)
1668(1700x1400)




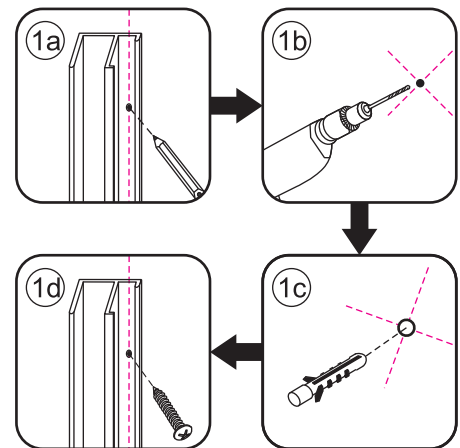
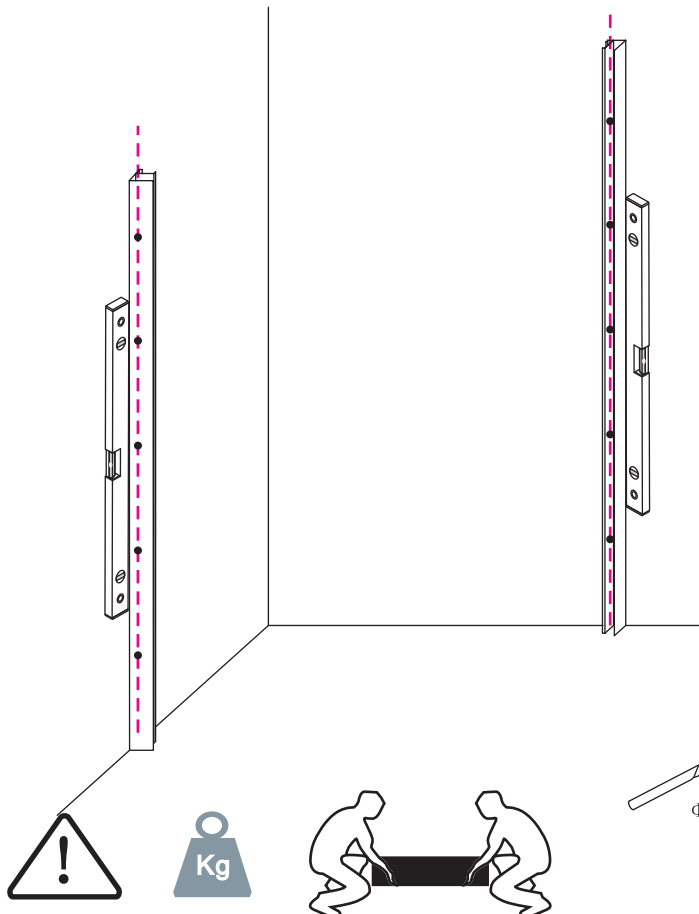


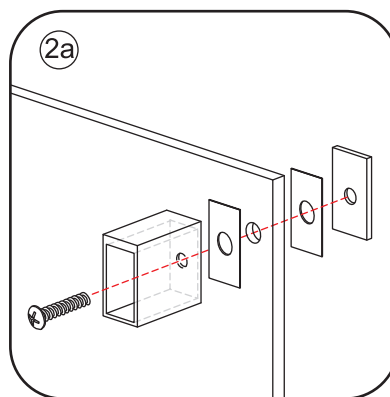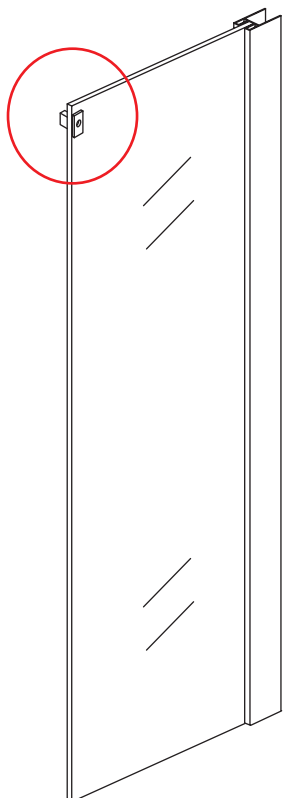


X1
4x12

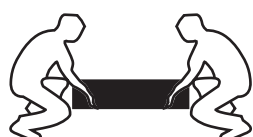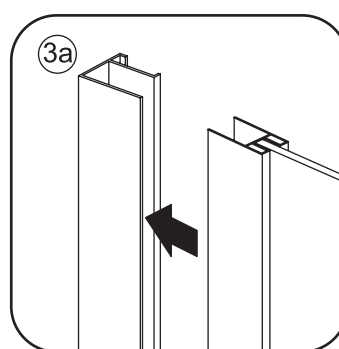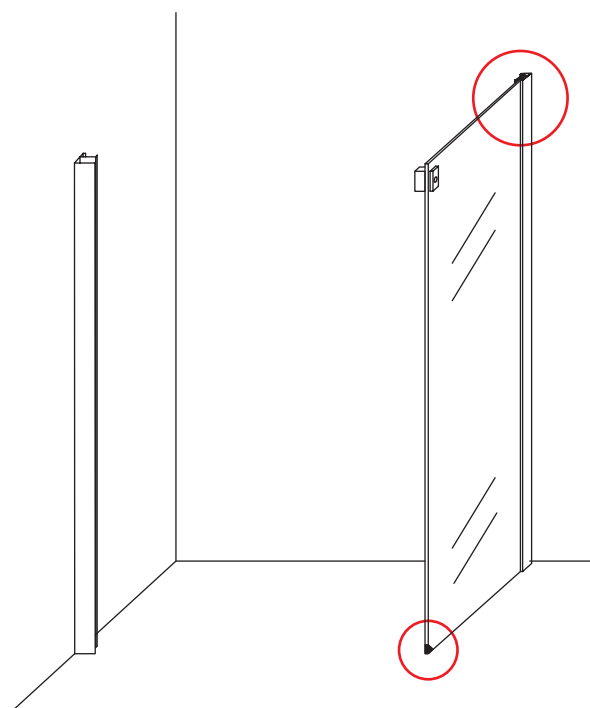


**Verwijder de zwarte
hoekbeschermers
pas als de cabine
helemaal is geïnstalleerd!**

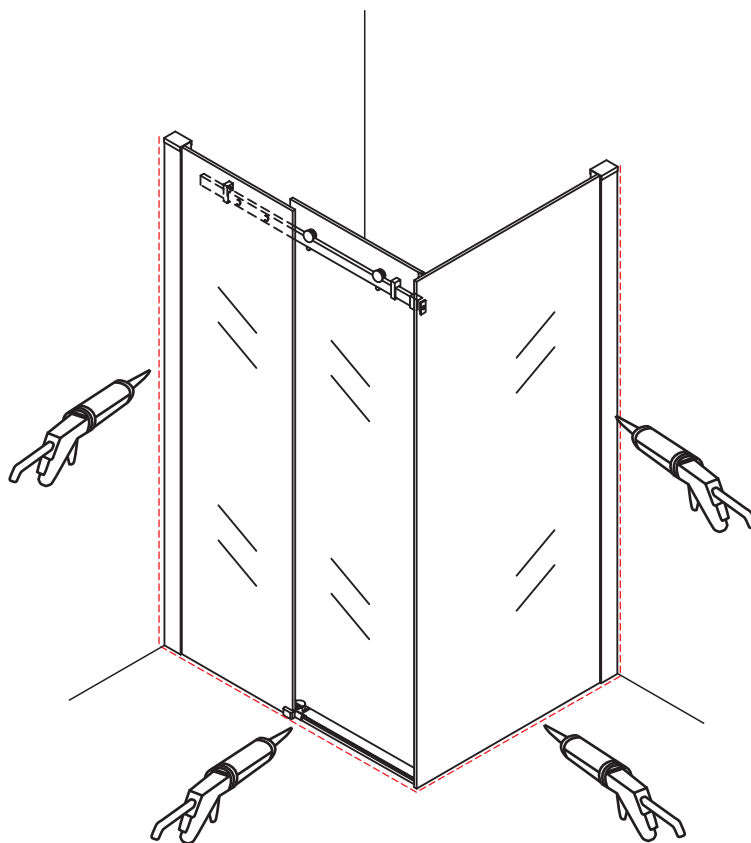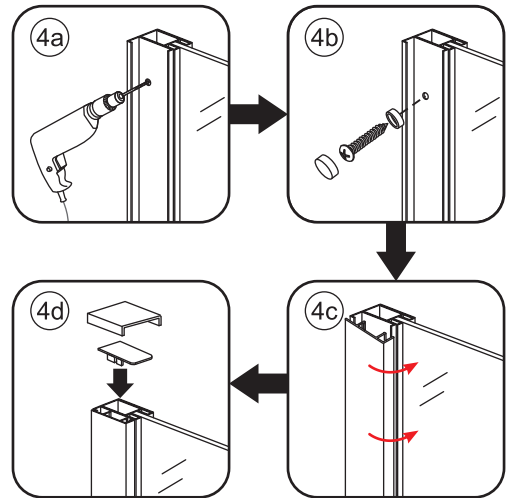
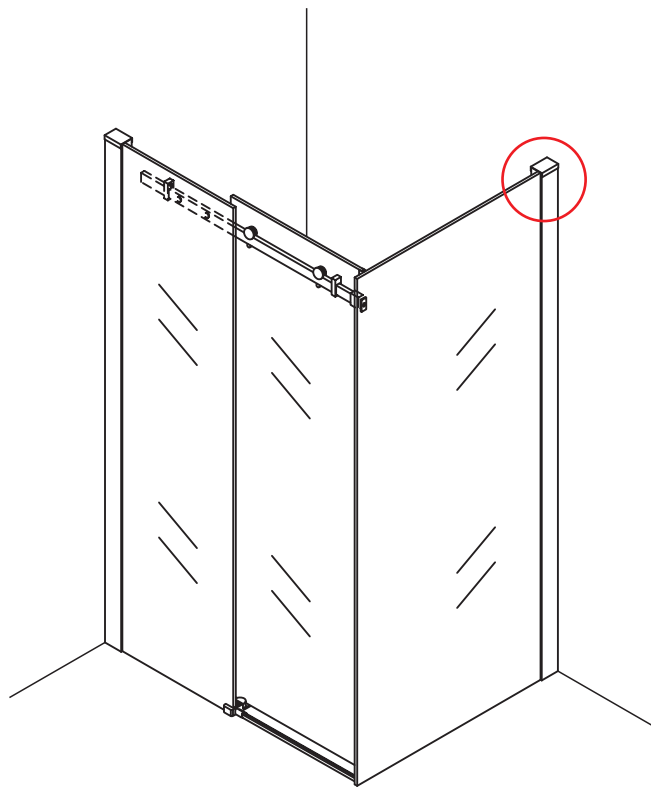


**Voorzie alleen de
buitenzijde van de
cabine van siliconenkit.**

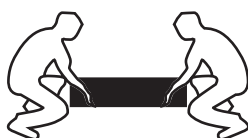

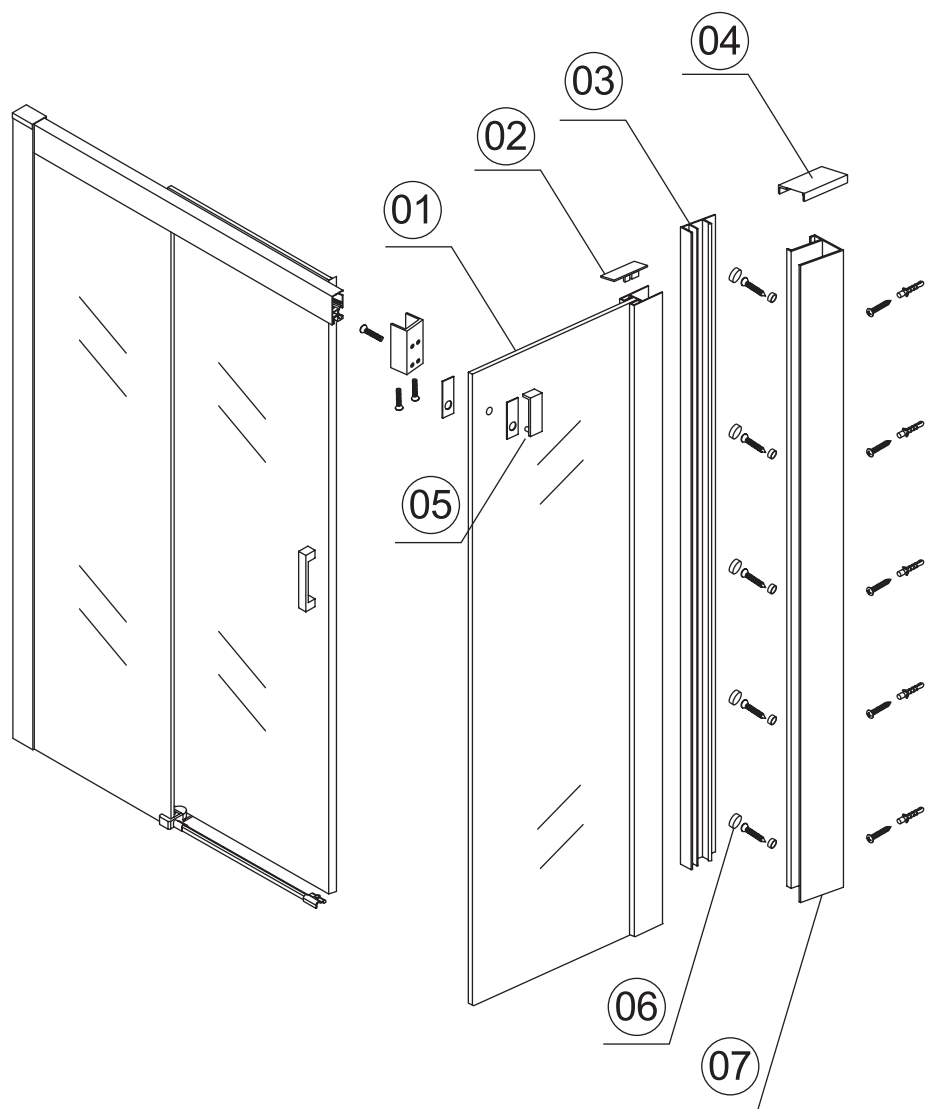

6

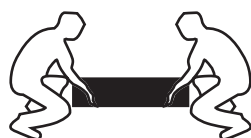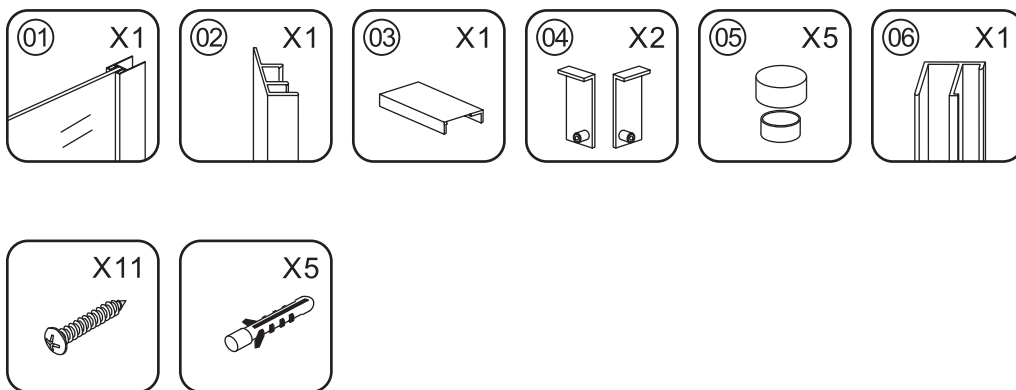

760(1200x800)
760(1400x800)
760(1600x800)
760(1700x800)

860(1200x900)
860(1400x900)
860(1600x900)
860(1700x900)

960(1200x1000)
960(1400x1000)
960(1600x1000)
960(1700x1000)

1060(1200x1100)
1060(1400x1100)
1060(1600x1100)
1060(1700x1100)

1160(1200x1200)
1160(1400x1200)
1160(1600x1200)
1160(1700x1200)

1360(1200x1400)
1360(1400x1400)
1360(1600x1400)
1360(1700x1400)

1168(1200x800)
1368(1400x800)
1568(1600x800)
1668(1700x800)






1168(1200x900)
1368(1400x900)
1568(1600x900)
1668(1700x900)



1168(1200x1000)
1368(1400x1000)
1568(1600x1000)
1668(1700x1000)

1168(1200x1100)
1368(1400x1100)
1568(1600x1100)
1668(1700x1100)

1168(1200x1200)
1368(1400x1200)
1568(1600x1200)
1668(1700x1200)



1168(1200x1400)
1368(1400x1400)
1568(1600x1400)
1668(1700x1400)

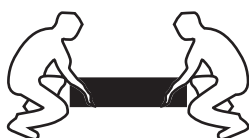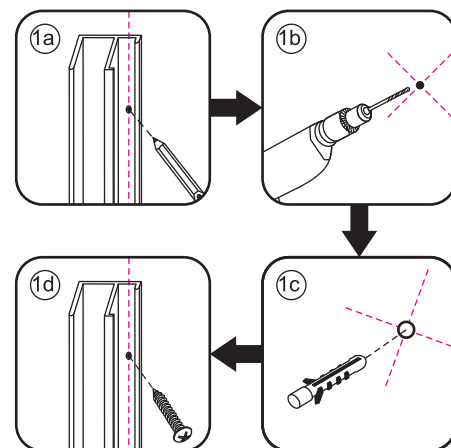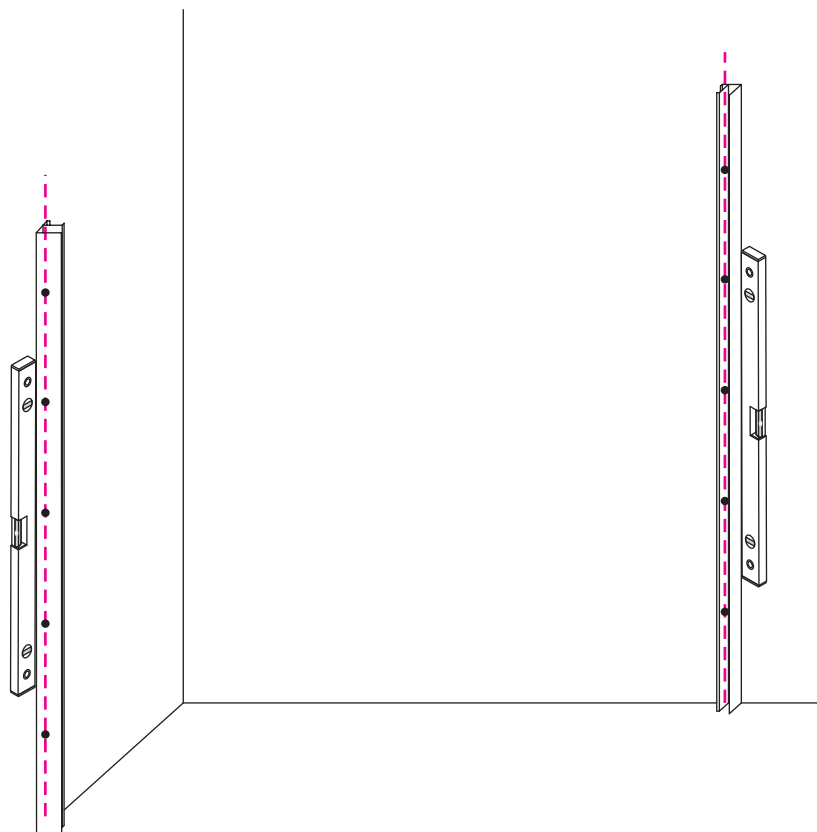

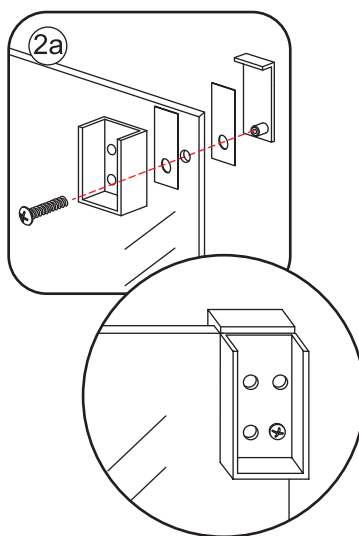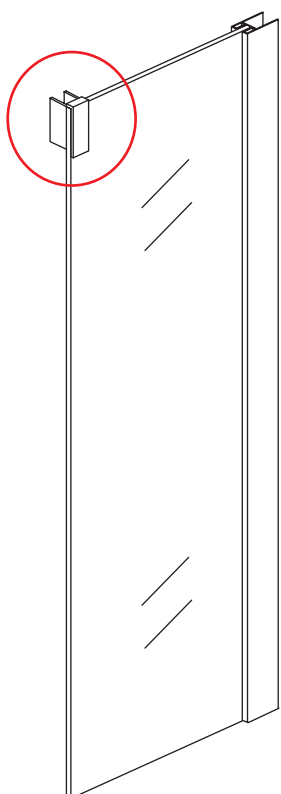










X1
4x12

8

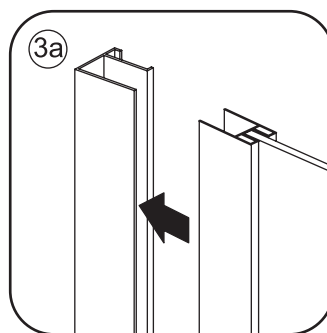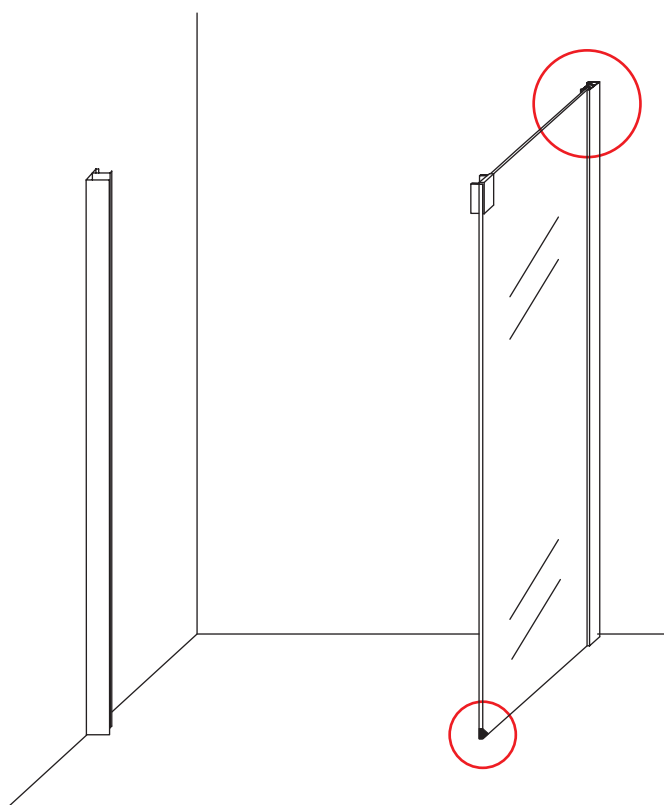

Verwijder de zwarte
hoekbeschermers
pas als de cabine
helemaal is geïnstalleerd!

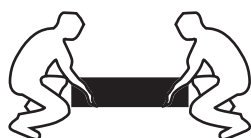

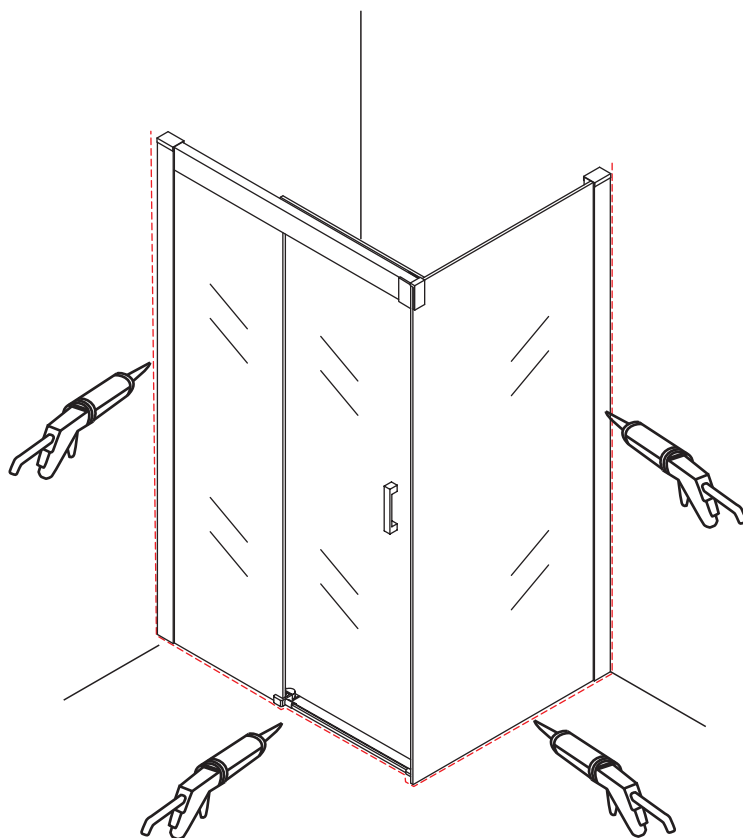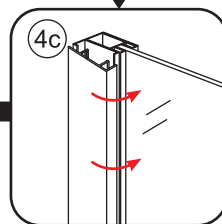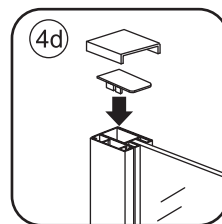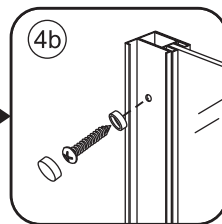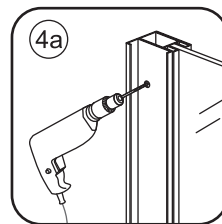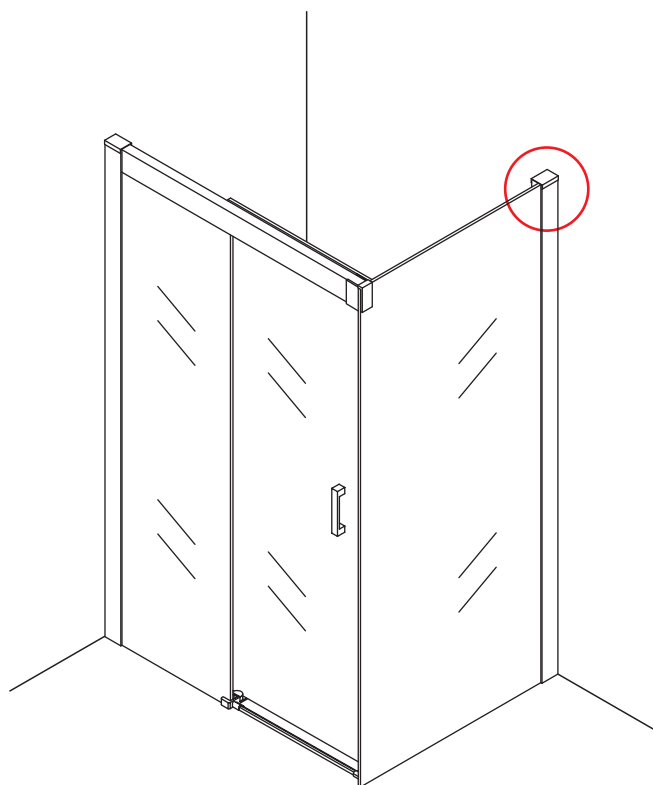

**Voorzie alleen de
buitenzijde van de
cabine van siliconenkit.**

