
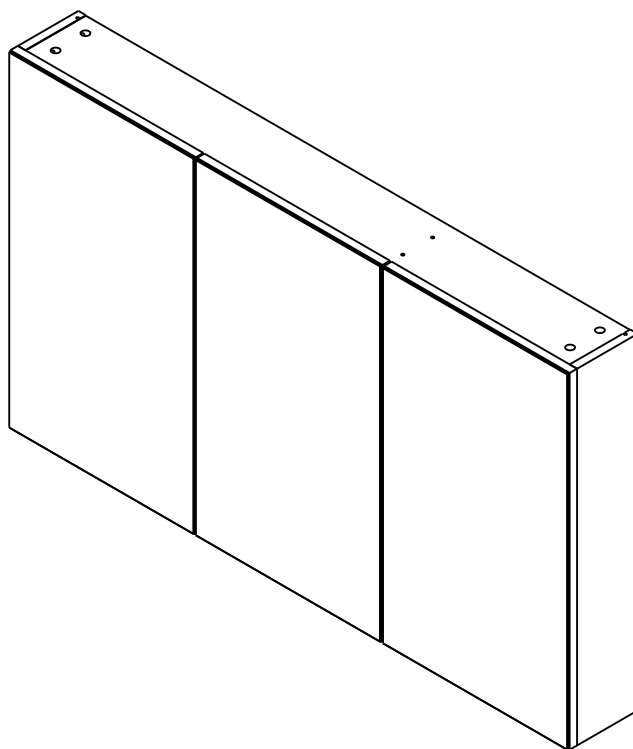





Installation Instructions

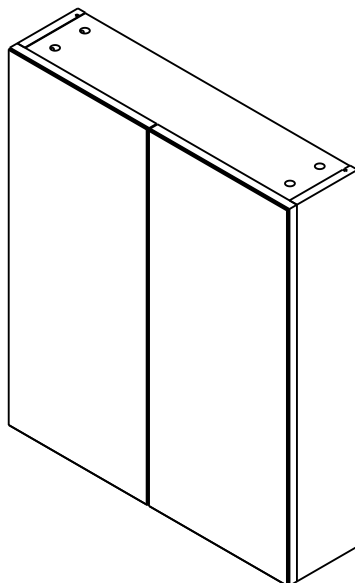


Sw420107 ✓

Sw420108 ✓

Sw420109 ✓


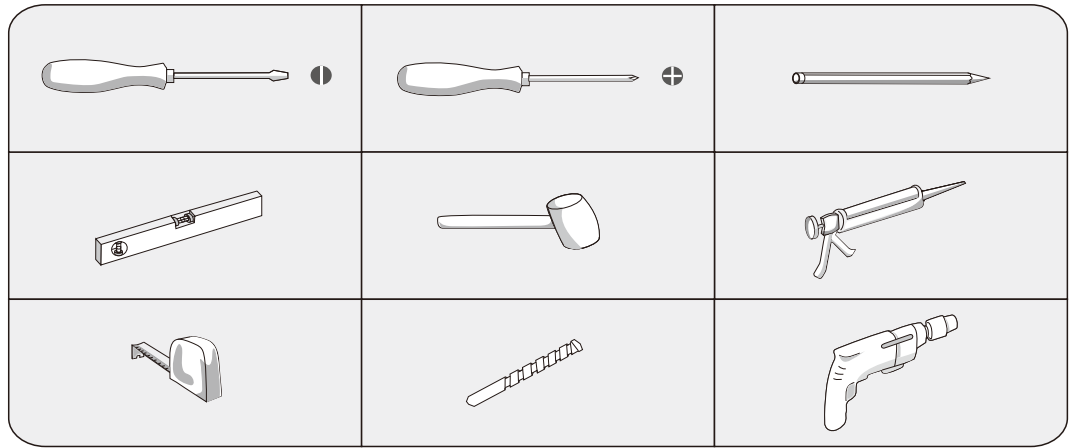
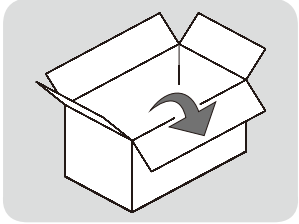
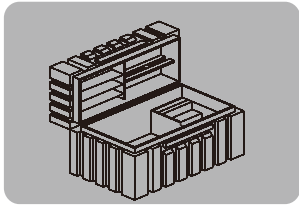


MIR
X=600mm
X=800mm
X=1200mm

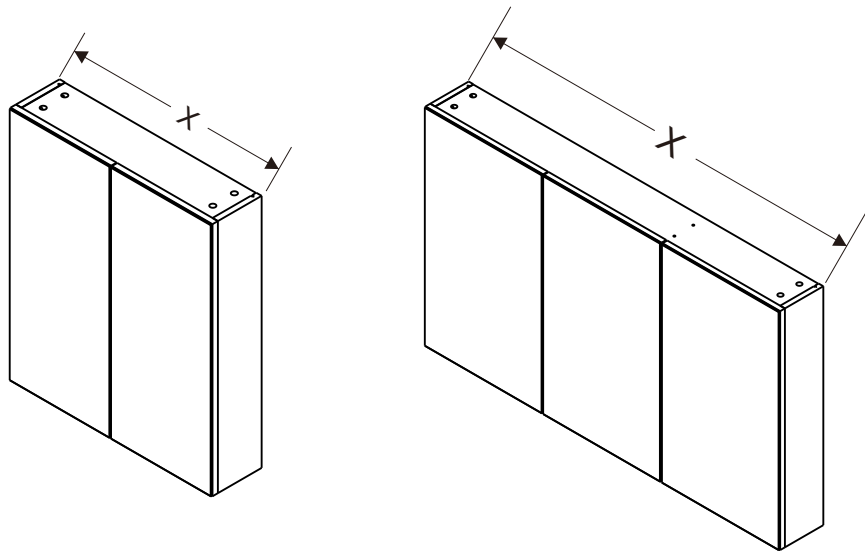



- M8*40
x4pcs
- M8*40
x6pcs
- x2pcs
- x3pcs
- M5*40mm
x4pcs
- M5*40mm
x6pcs

1

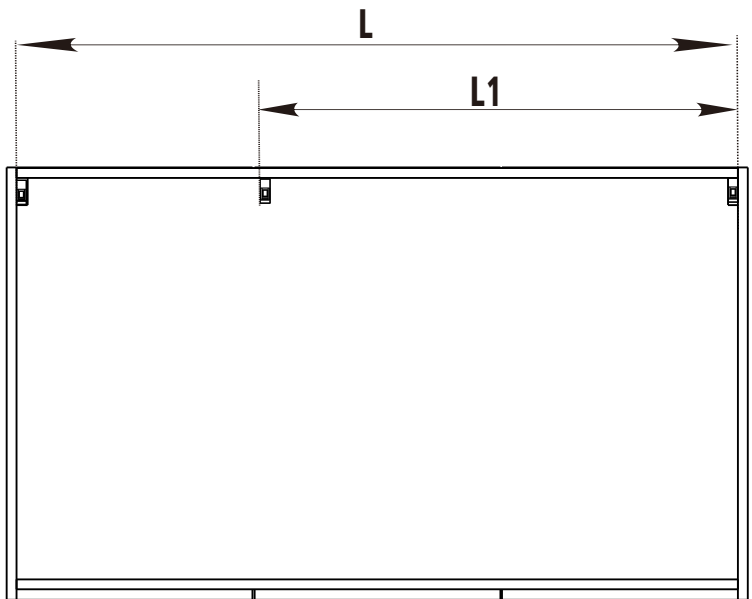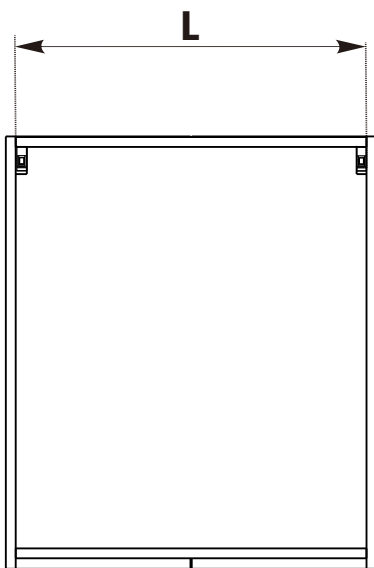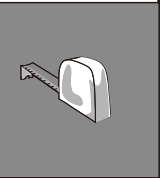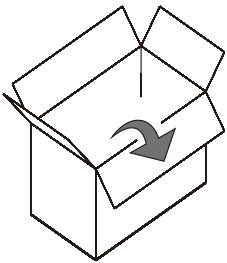

2

X=600/800mm

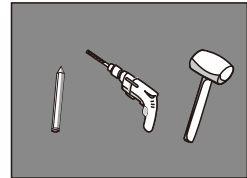
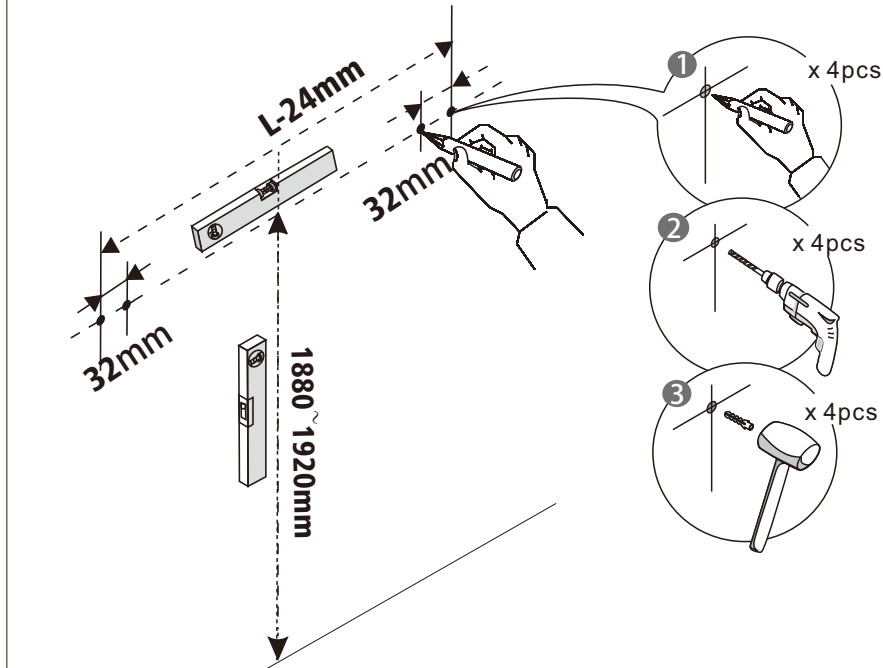


M8*40



x4pcs

X=1200mm

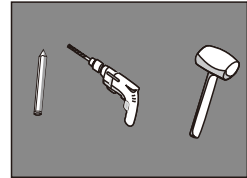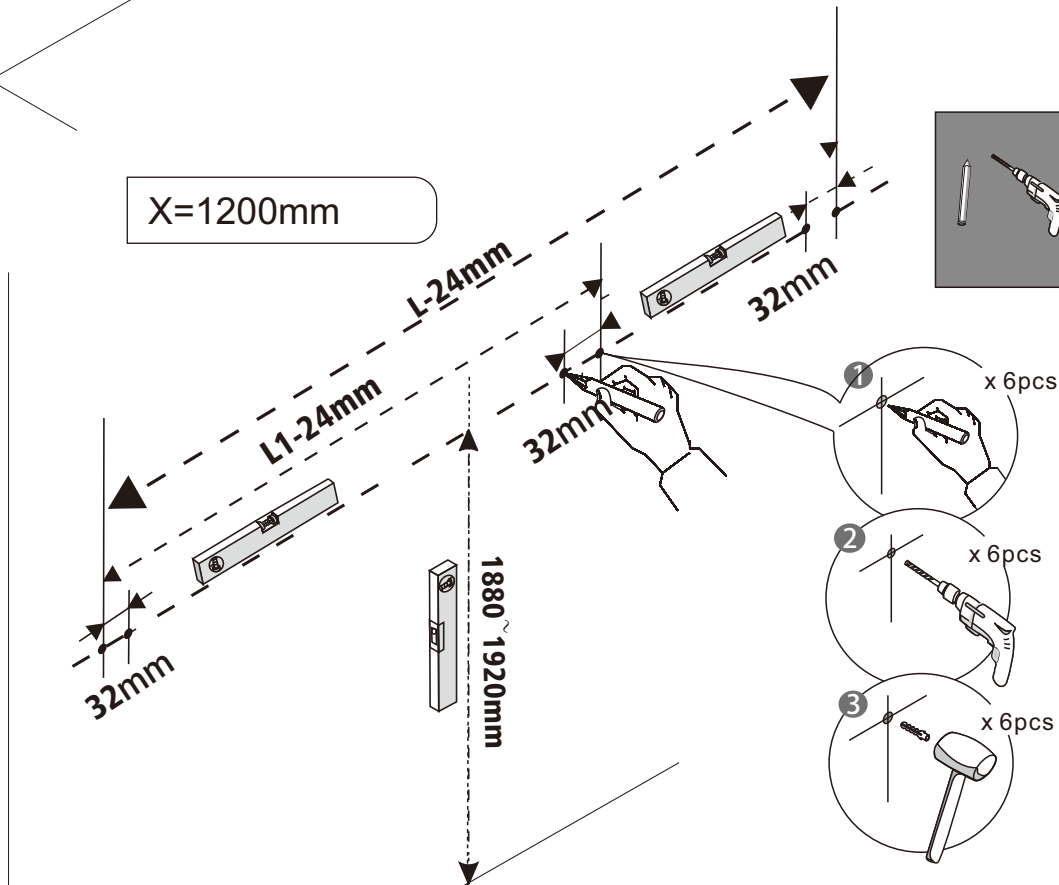




M8*40




x6pcs

3

X=600/800mm

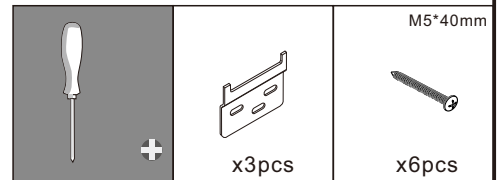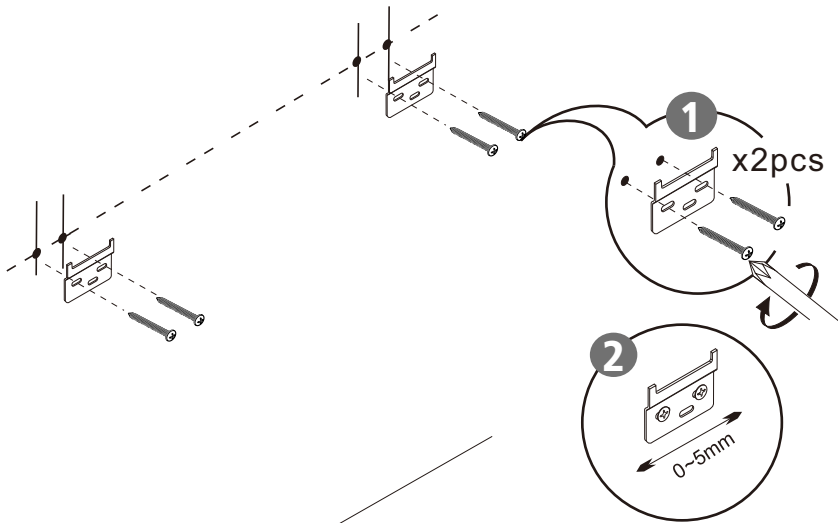
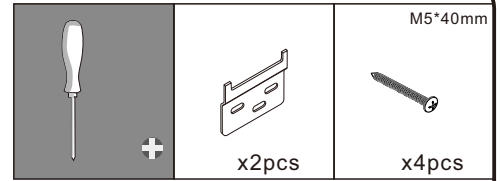


X=1200mm

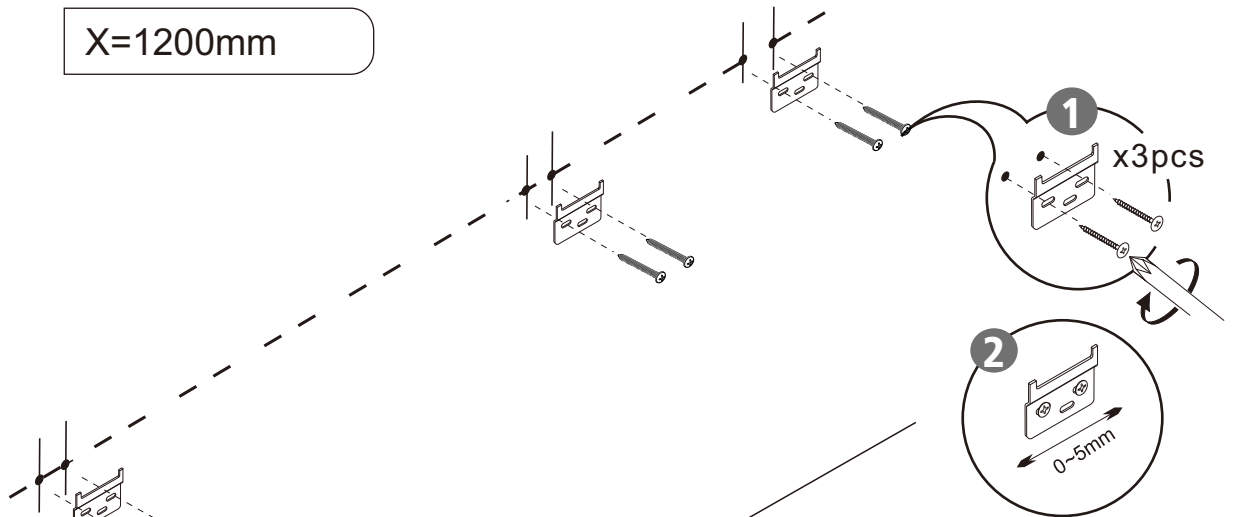

4

X=600/800mm

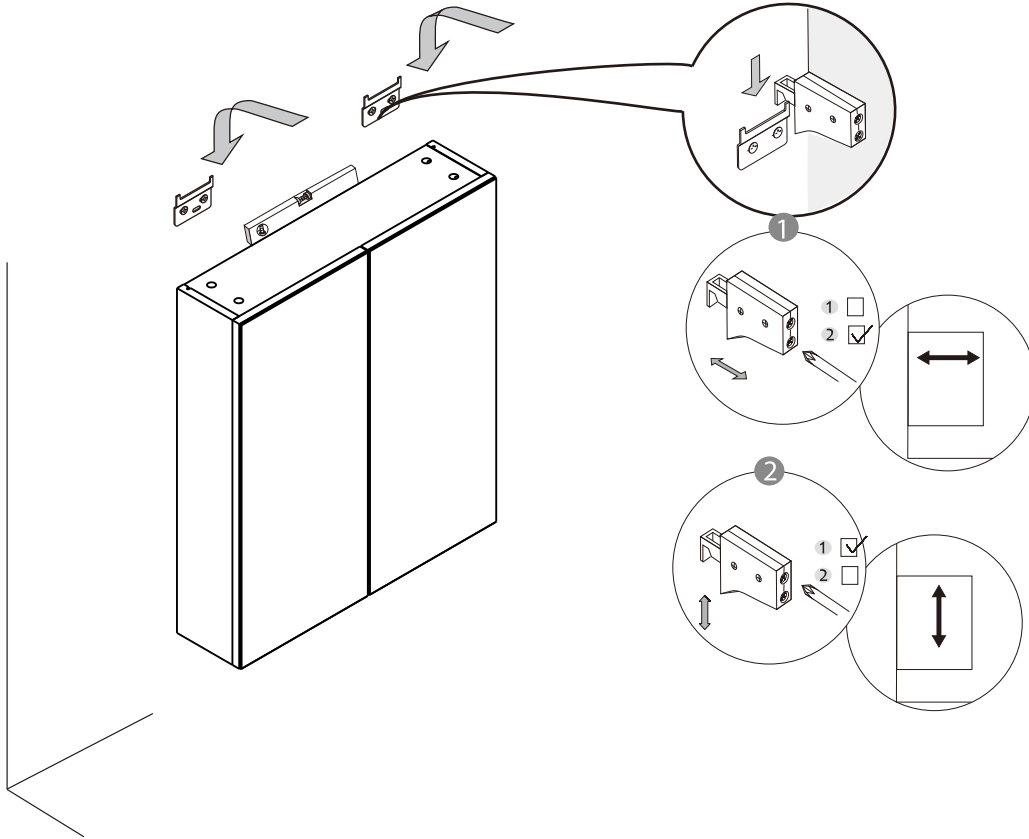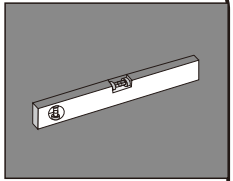

X=1200mm

