



Installation Instructions

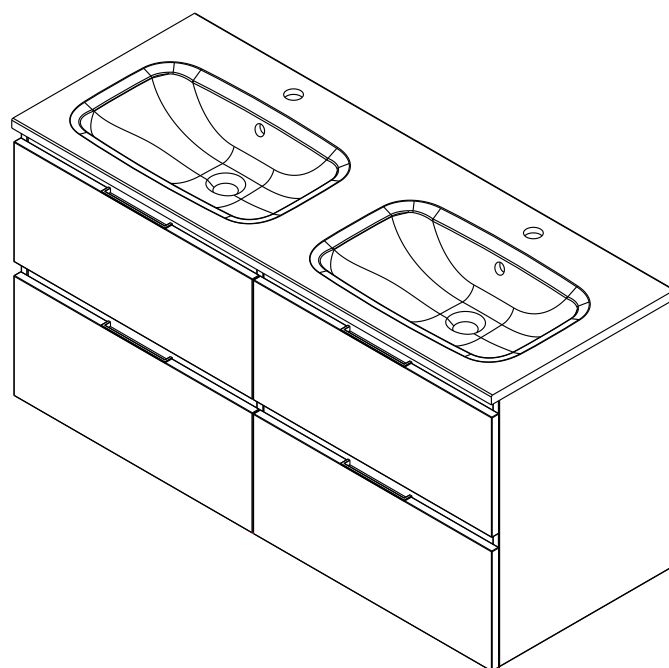

LOOKS-60



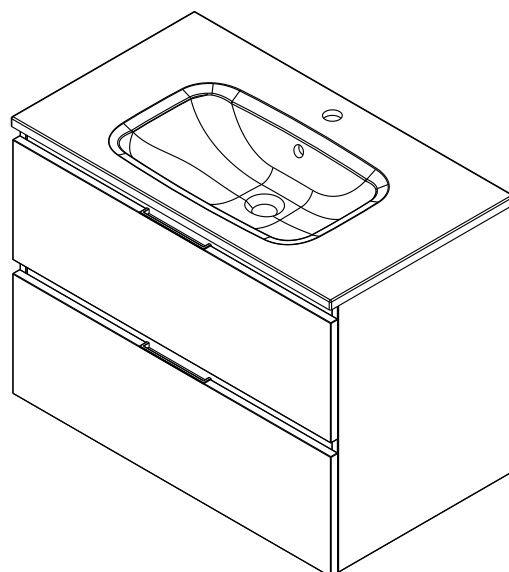


LOOKS-80



LOOKS-120



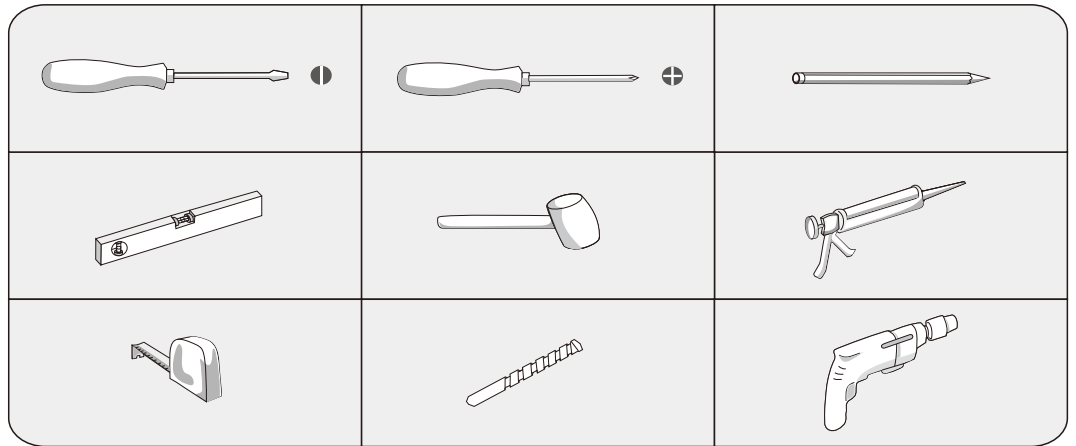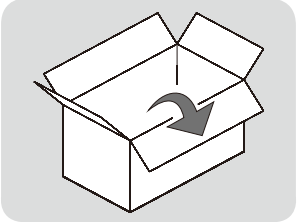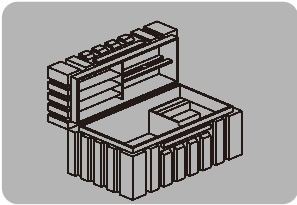

Basin

X=600mm

X=800mm


X=1200mm

Pack

X=596mm





X=796mm

X=1196mm

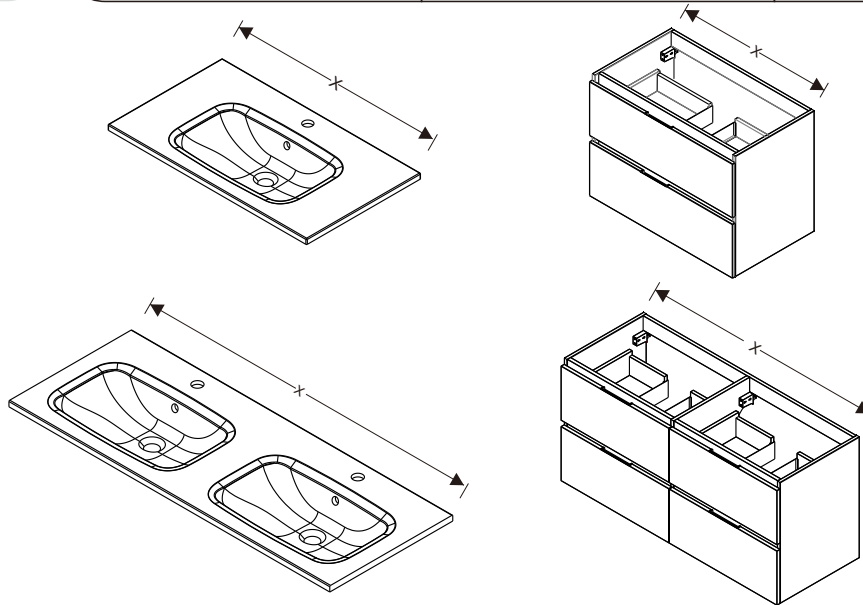



- M8*40
Ax4pcs
M8*40
A1x8pcs
- Bx4pcs
- B1x4pcs
- M5*40mm
Cx8pcs
M5*40mm
C1x8pcs

1

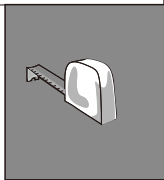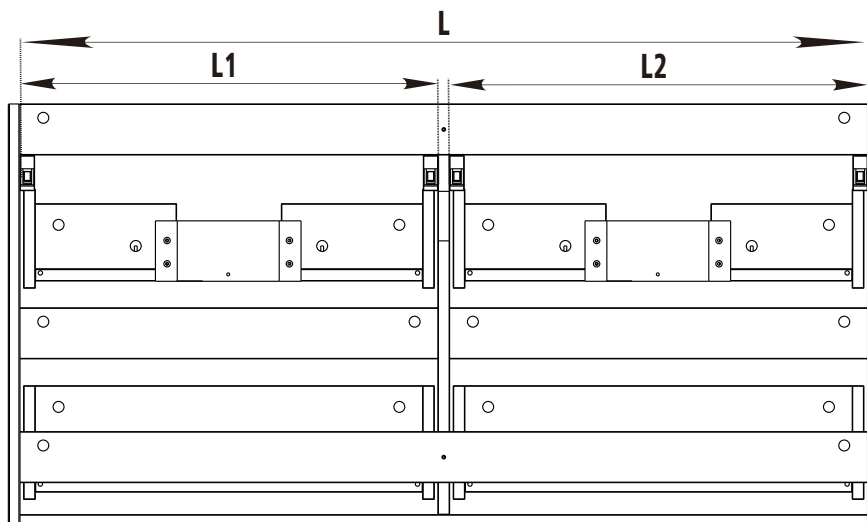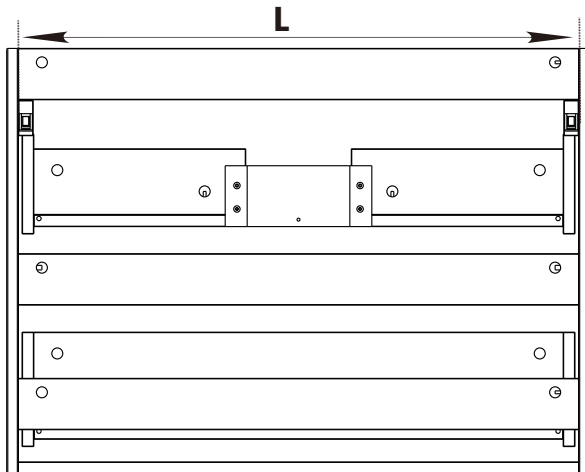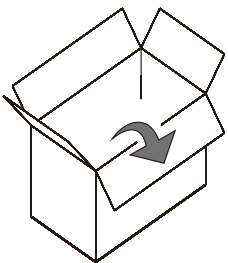

2

X=600/800mm

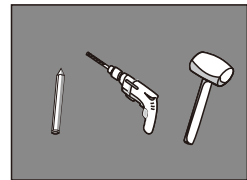
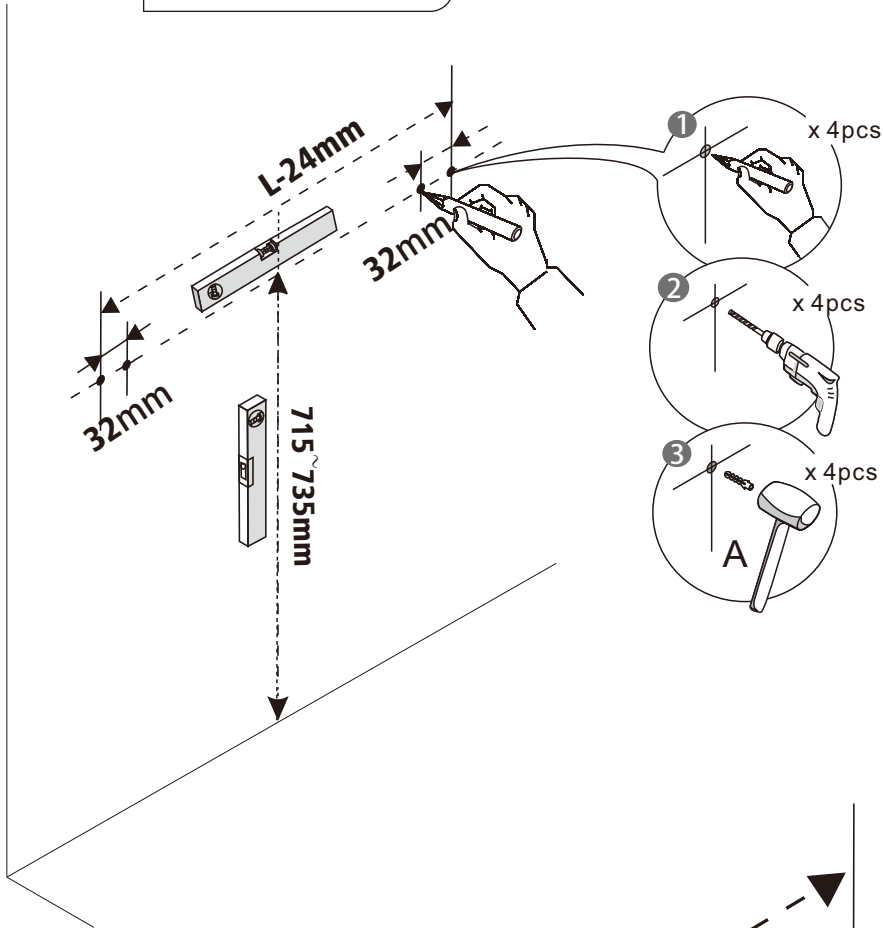


M8*40



Ax4pcs

X=1200mm

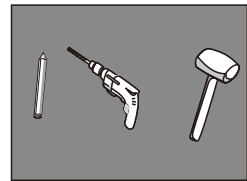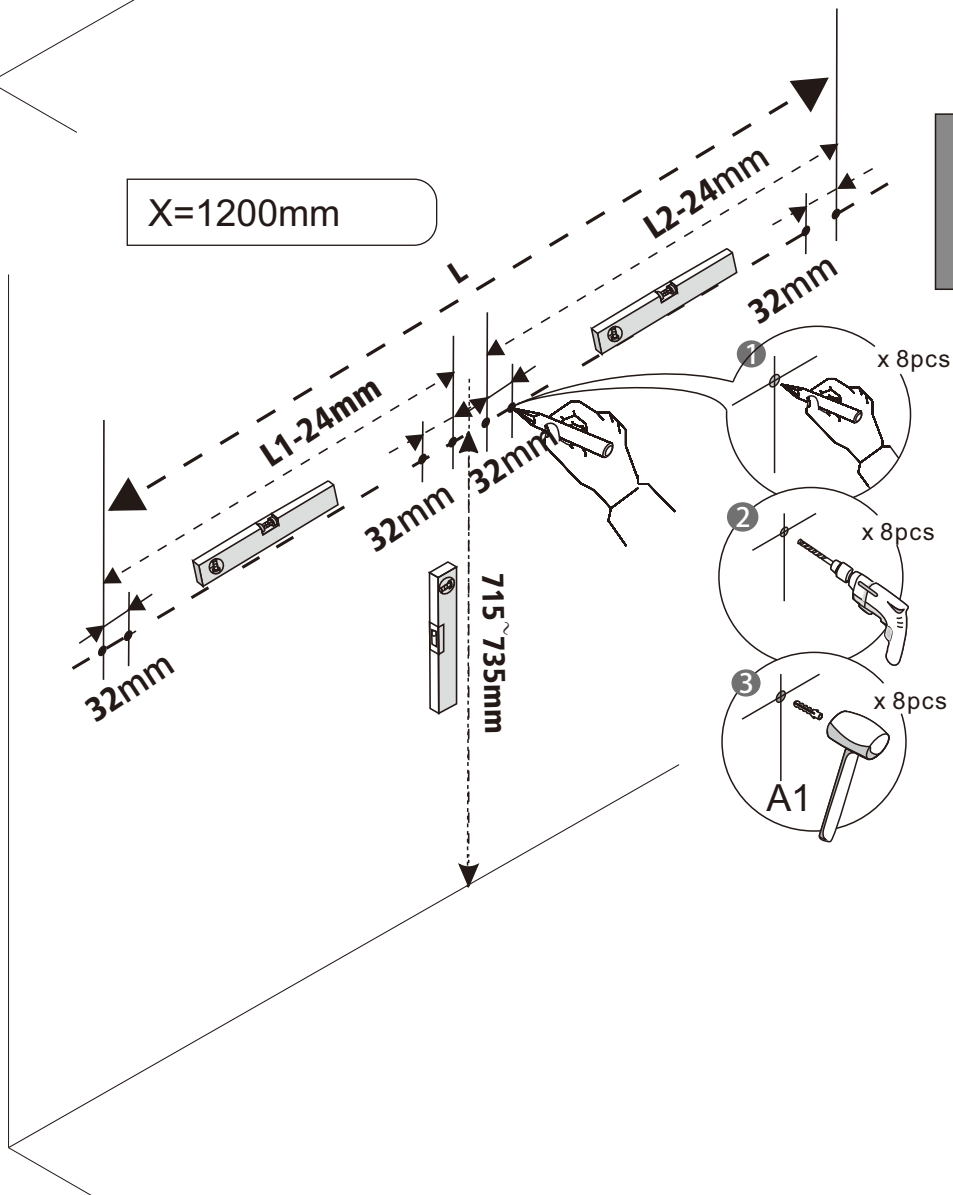




M8*40




A1x8pcs

3

X=600/800mm

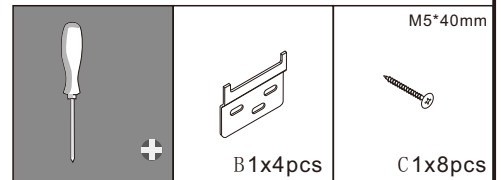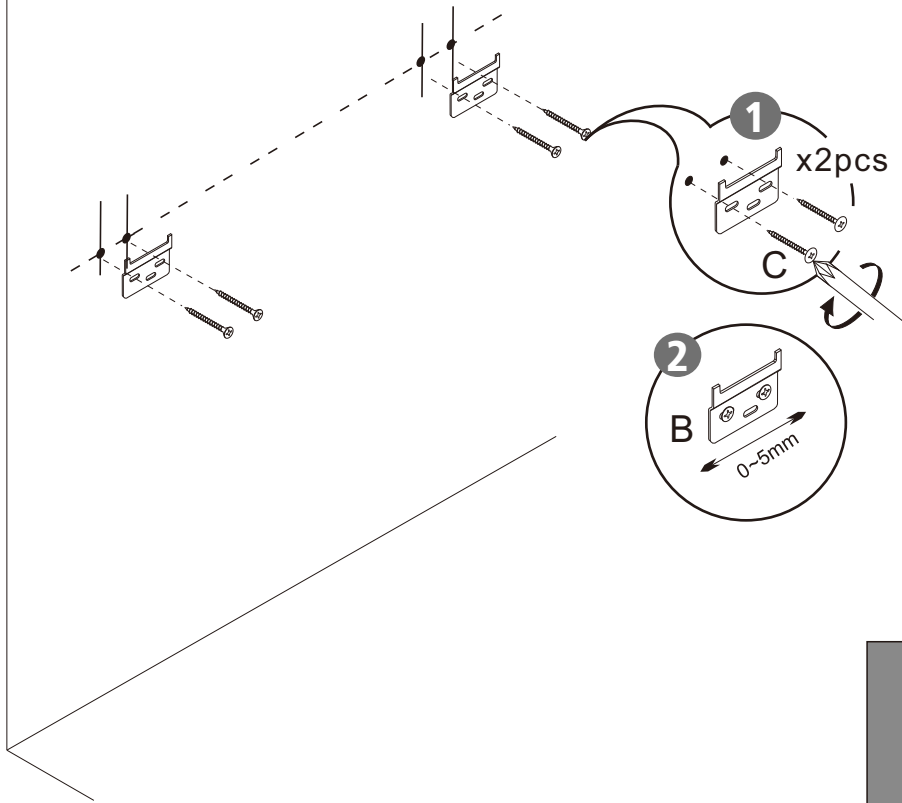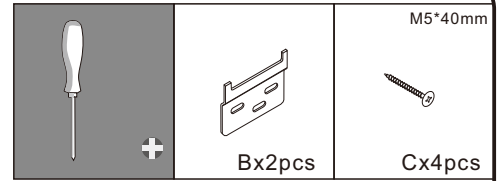


X=1200mm

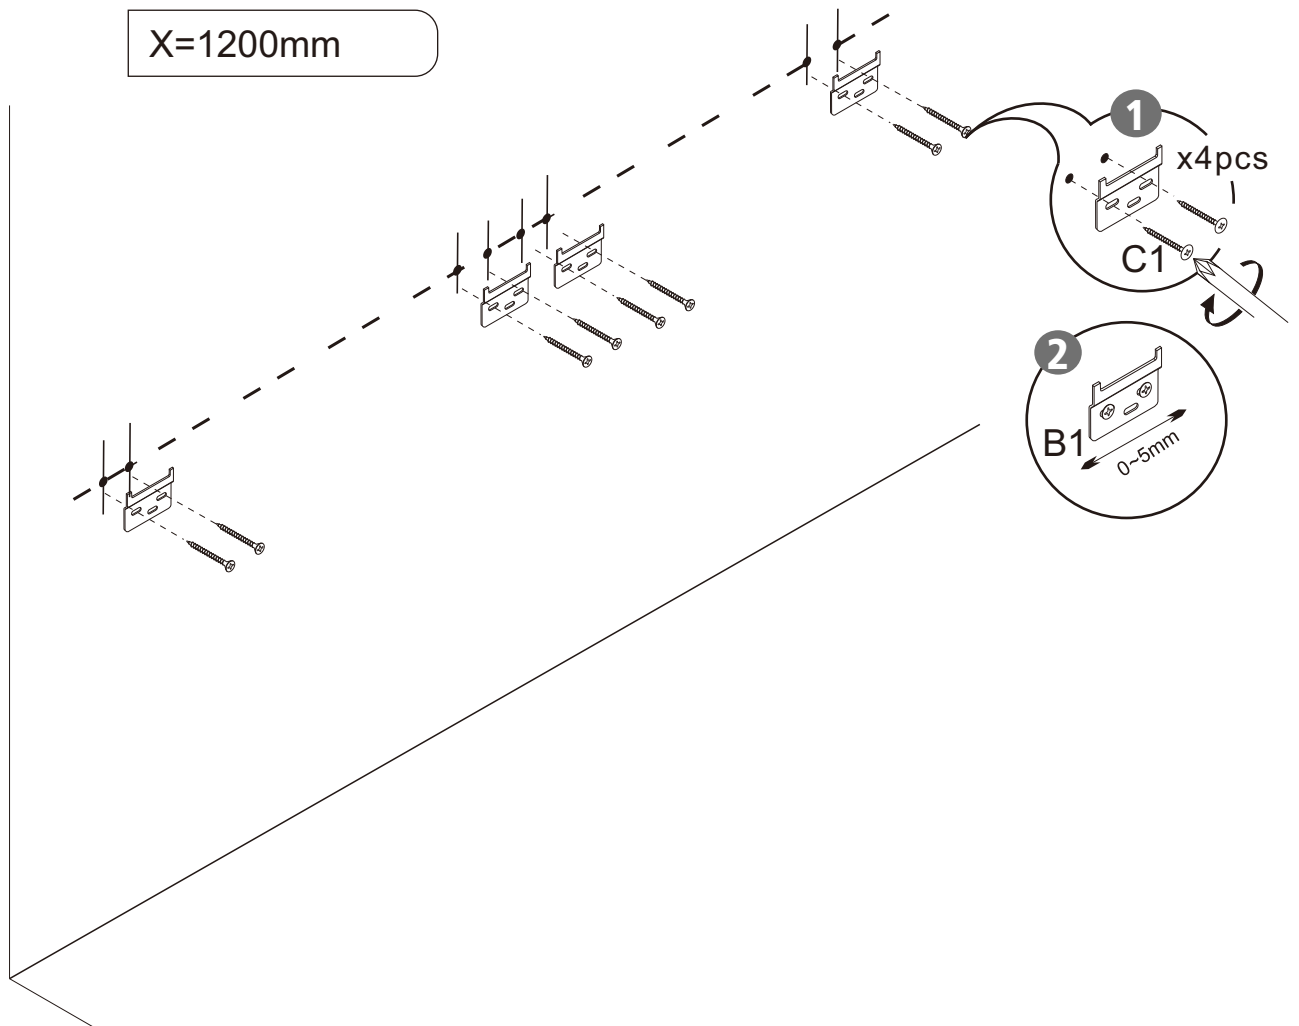


4

X=600/800mm


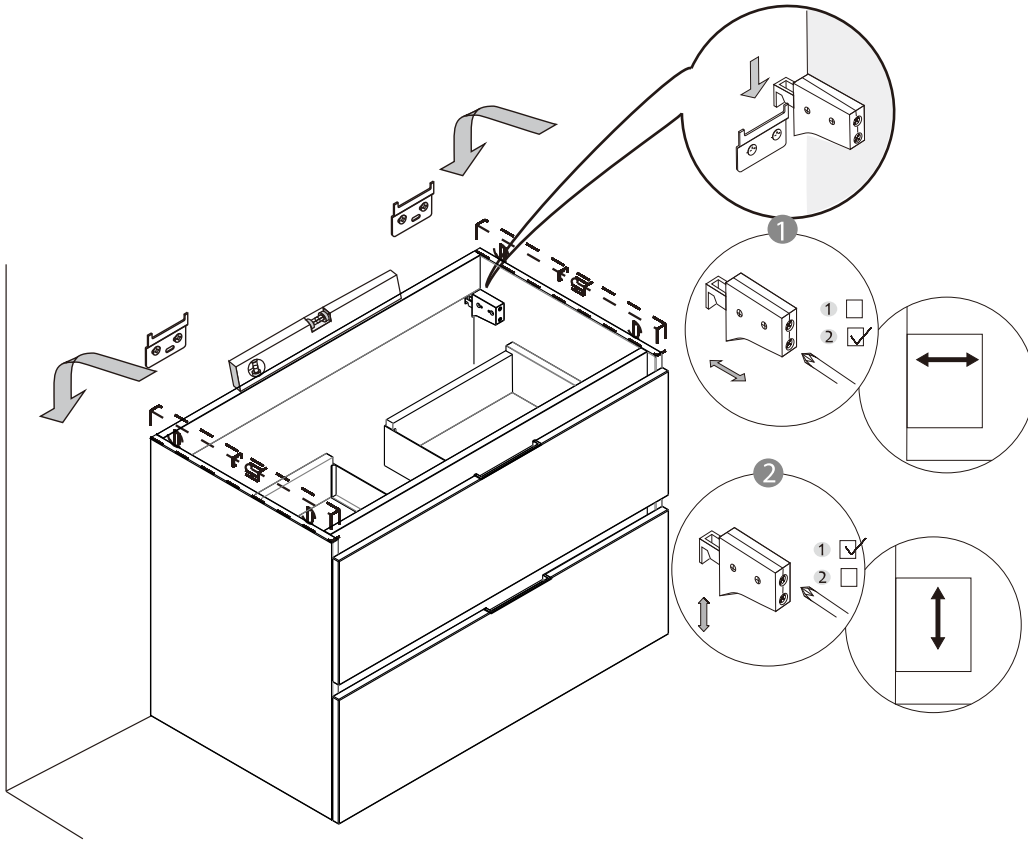


X=1200mm

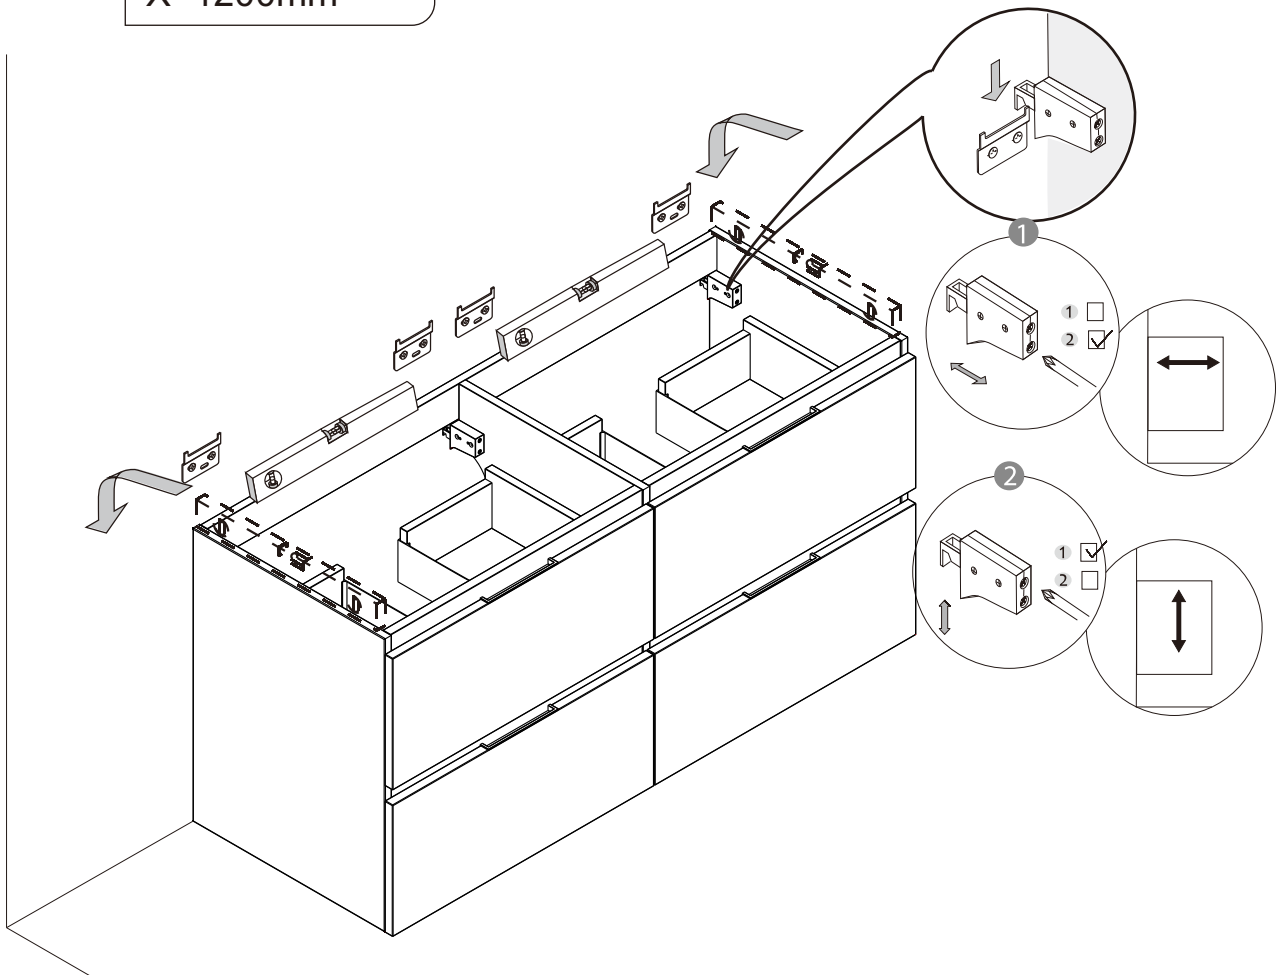

5

X=600/800mm

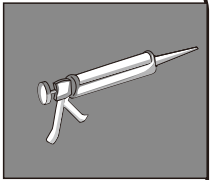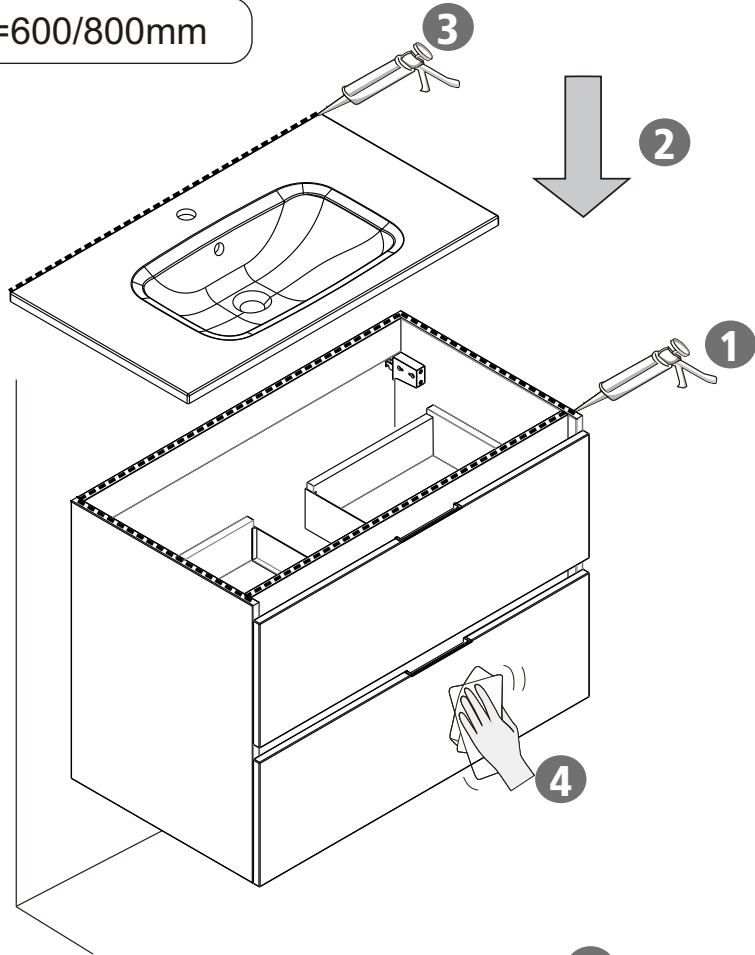

X=1200mm

