
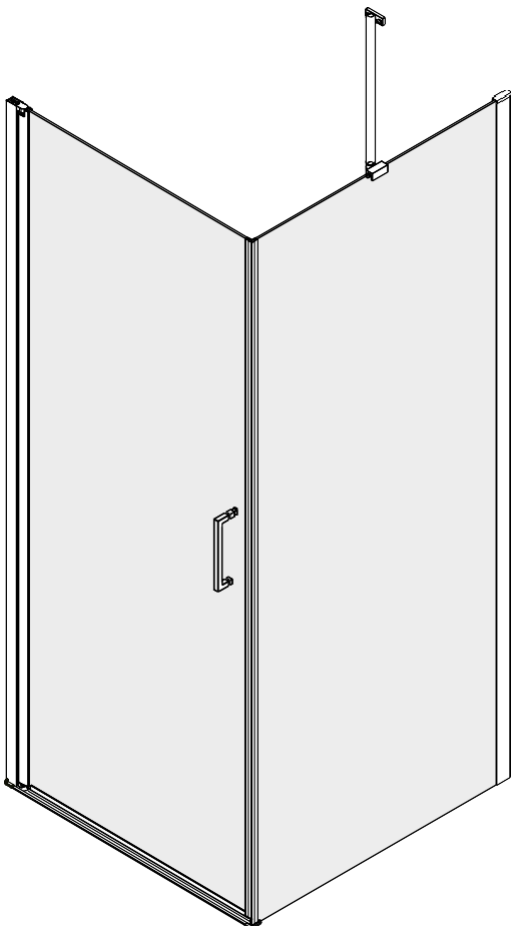



Van Marcke

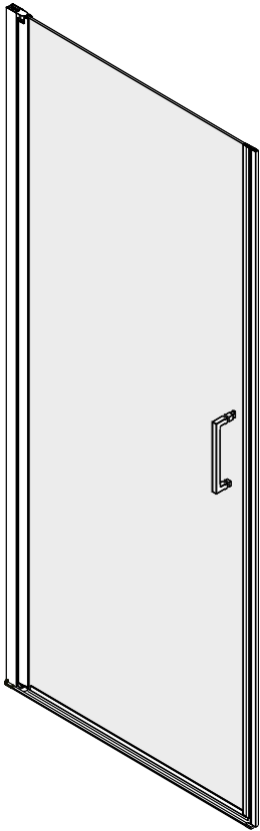


montagehandleiding & spare parts  
instruction demontage & spare parts  
montageanleitung & spare parts

**VAN MARCKE PINA**  
**VAN MARCKE PINA**  
**FIX**

# CONTENU / PARTS LIST

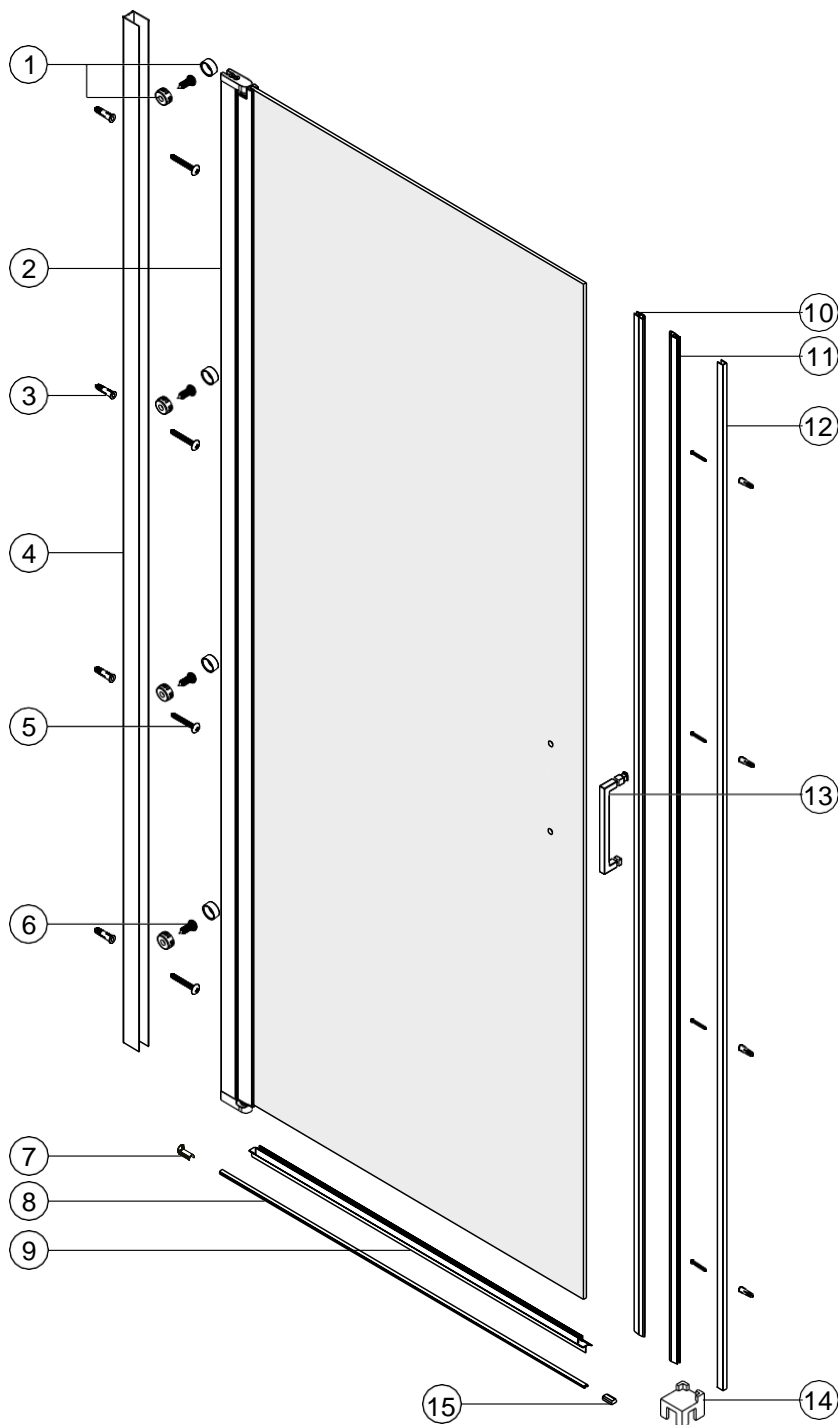


NO	Qty	Description	NO	Qty	Description
1	4	Chrome Screw cap	9	1	Back splash gasket L/R <b>SKU 224627</b>
2	1	Clear Door	10	1	6mm gasket
3	8	Wall anchor	11	1	10mm gasket
4	1	Chrome Wall Chanel	12	1	Chrome wall chanel for magnet
5	8	1 5/8 " flat head screw	13	1	Handle
6	4	4X16 screw	14	2	Glass installation tool
7	2	Chrome bracket for threshold L/R	15	2	Chrome bracket for threshold L/R
8	1	Chrome back splash			

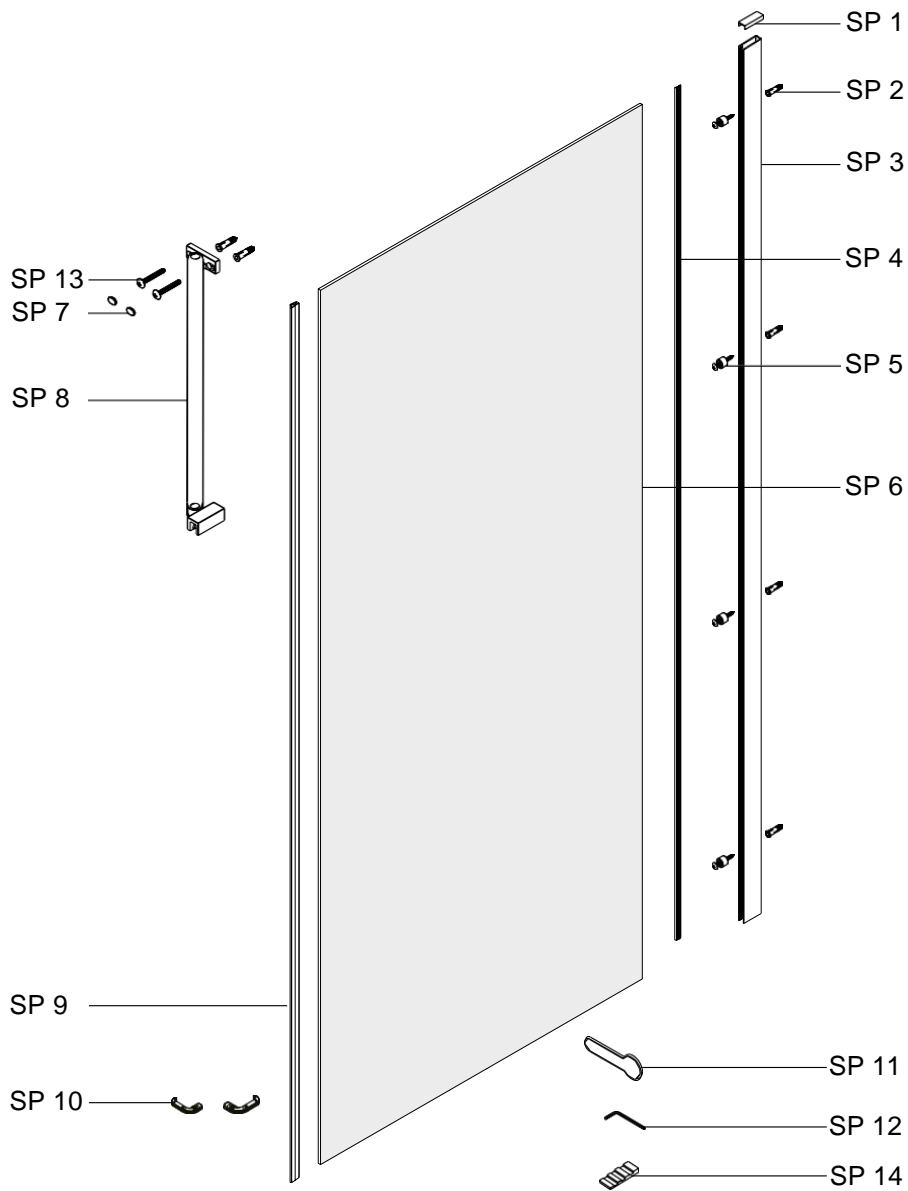


NO	Qty	Description
SP 1	1	Channel Cap Extrusion
SP 2	6	Wall Anchor
SP 3	1	Chrome Wall Channel
SP 4	1	Squeeze Gasket
SP 5	4	ST4X40 Screw
SP 6	1	Clear Return Pannel
SP 7	2	Screw Cover For Hole
SP 8	1	Assembly Bar
SP 9	1	6mm Magnet Gasket <span style="border: 1px solid red; padding: 2px;">SKU 224629</span>
SP 10	2	Chrome Comer Bracket For Threshold
SP 11	1	Squeeze Gasket Tool
SP 12	1	Allen key
SP 13	2	ST4X40 Screw
SP 14	2	Glass Wedge


**A** 01

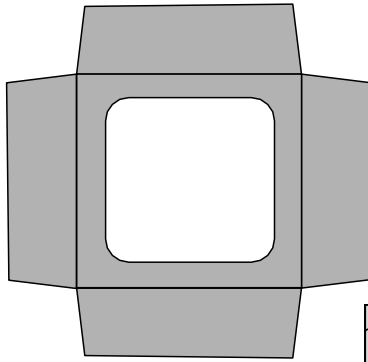

Pour protéger le FINI de votre base de douche.  
To protect your shower base finish.


20~30mm

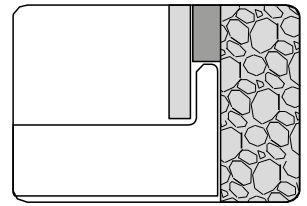



**ATTENTION !**  
Attendre 24h avant d'installer votre porte de douche, afin de permettre au mortier et à la finition de sécher complètement.


**WARNING !**  
Wait 24h before proceeding with the installation of the shower door. This will ensure that the finish and mortar is dry.

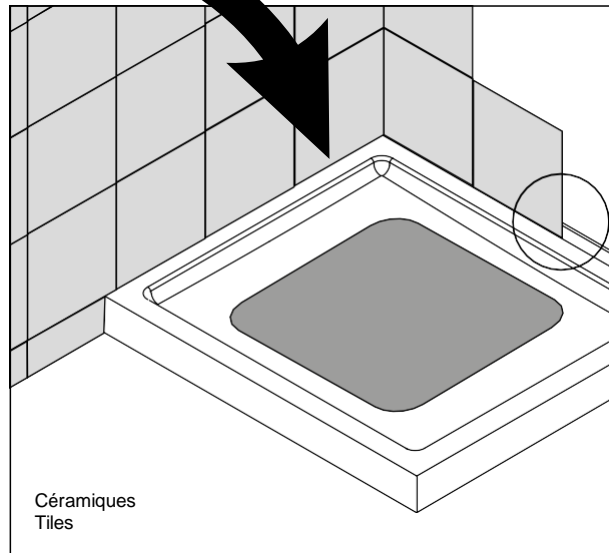

INSTALLATION EXTRUSION MURALE / WALL JAMB INSTALLATION






**A** 02

SIZE	A
700mm	680~695mm
800mm	780~795mm
900mm	880~895mm

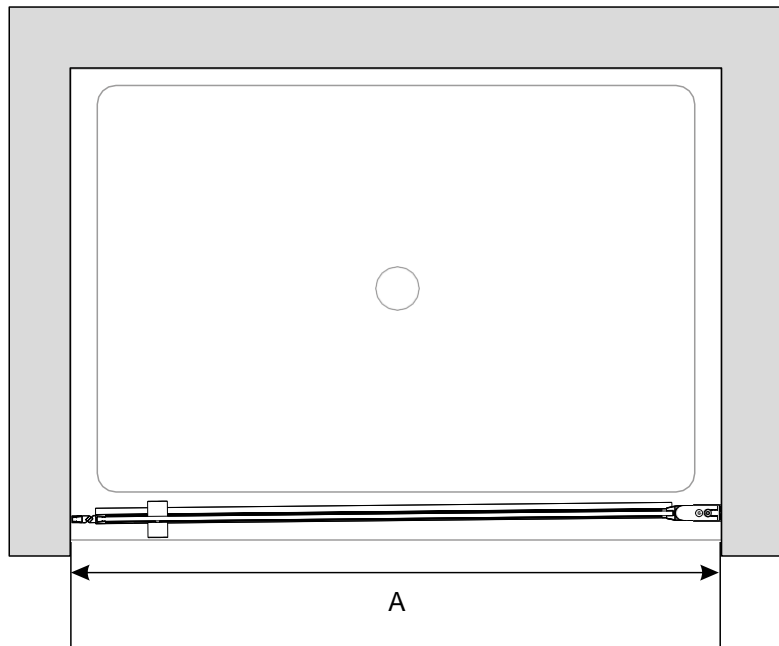


# SUITE / CONTINUED

**A** 03

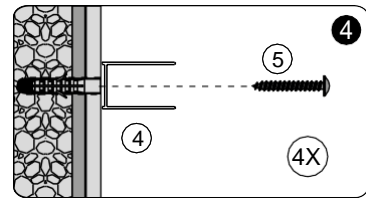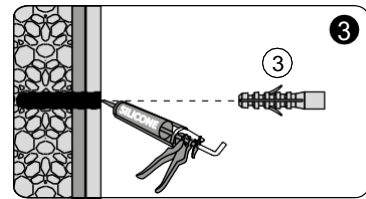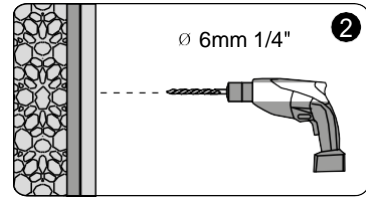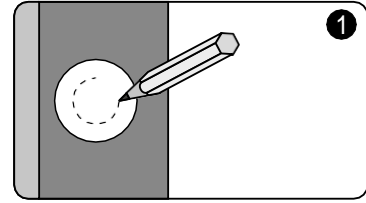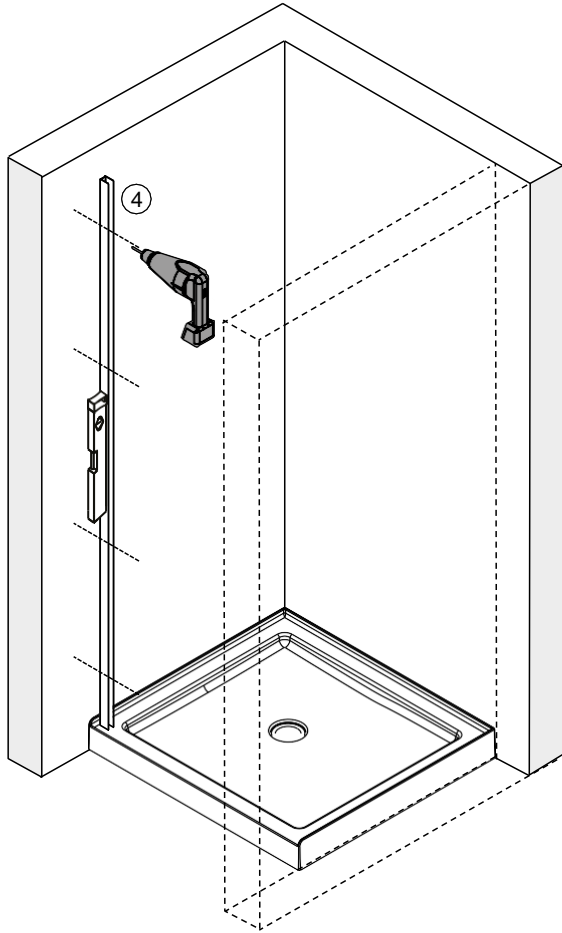


# SUITE / CONTINUED

**A** 04

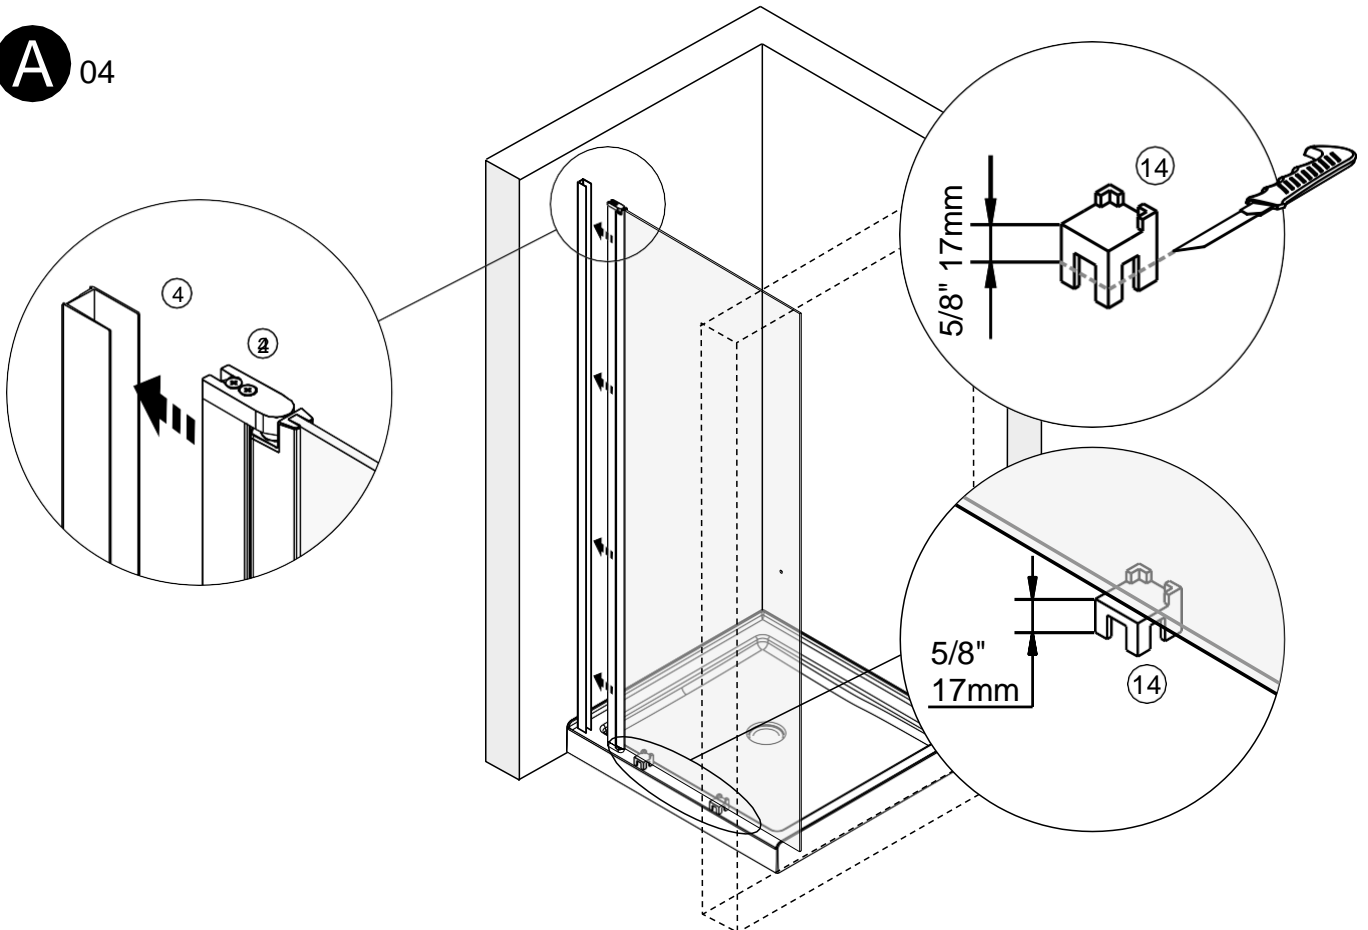


# SUITE / CONTINUED

**A** 05

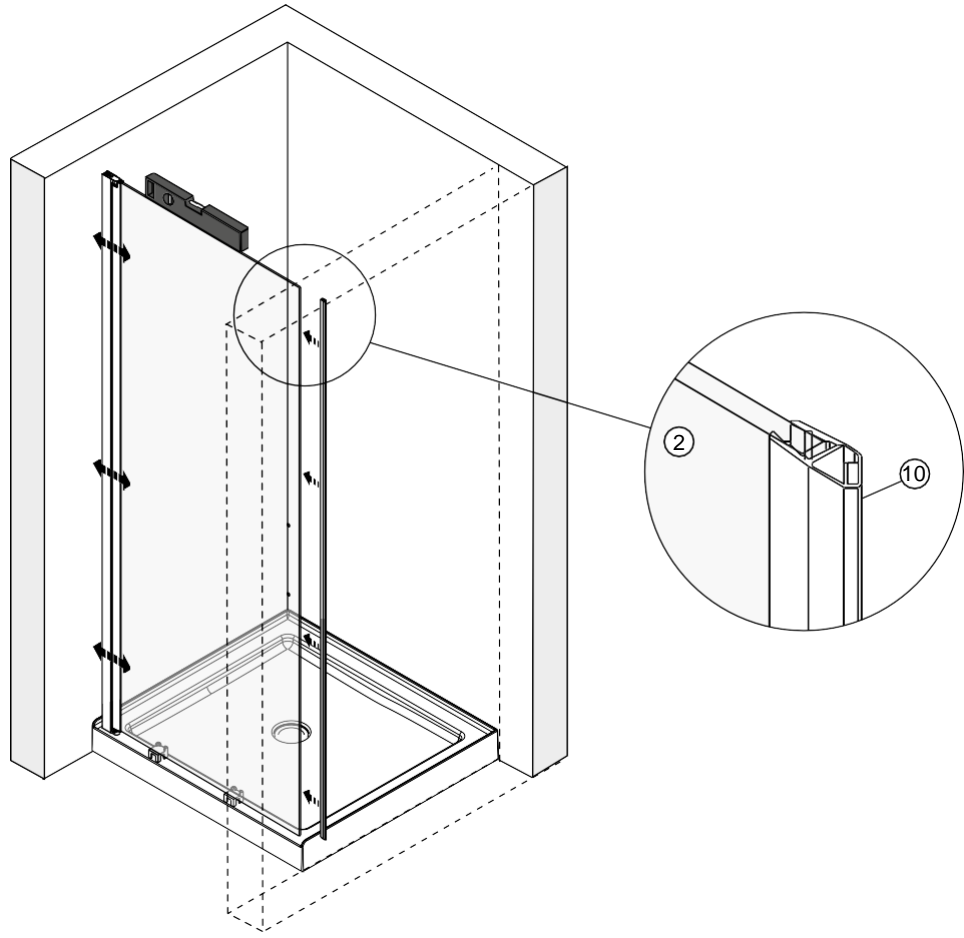


# SUITE / CONTINUED

**A** 06

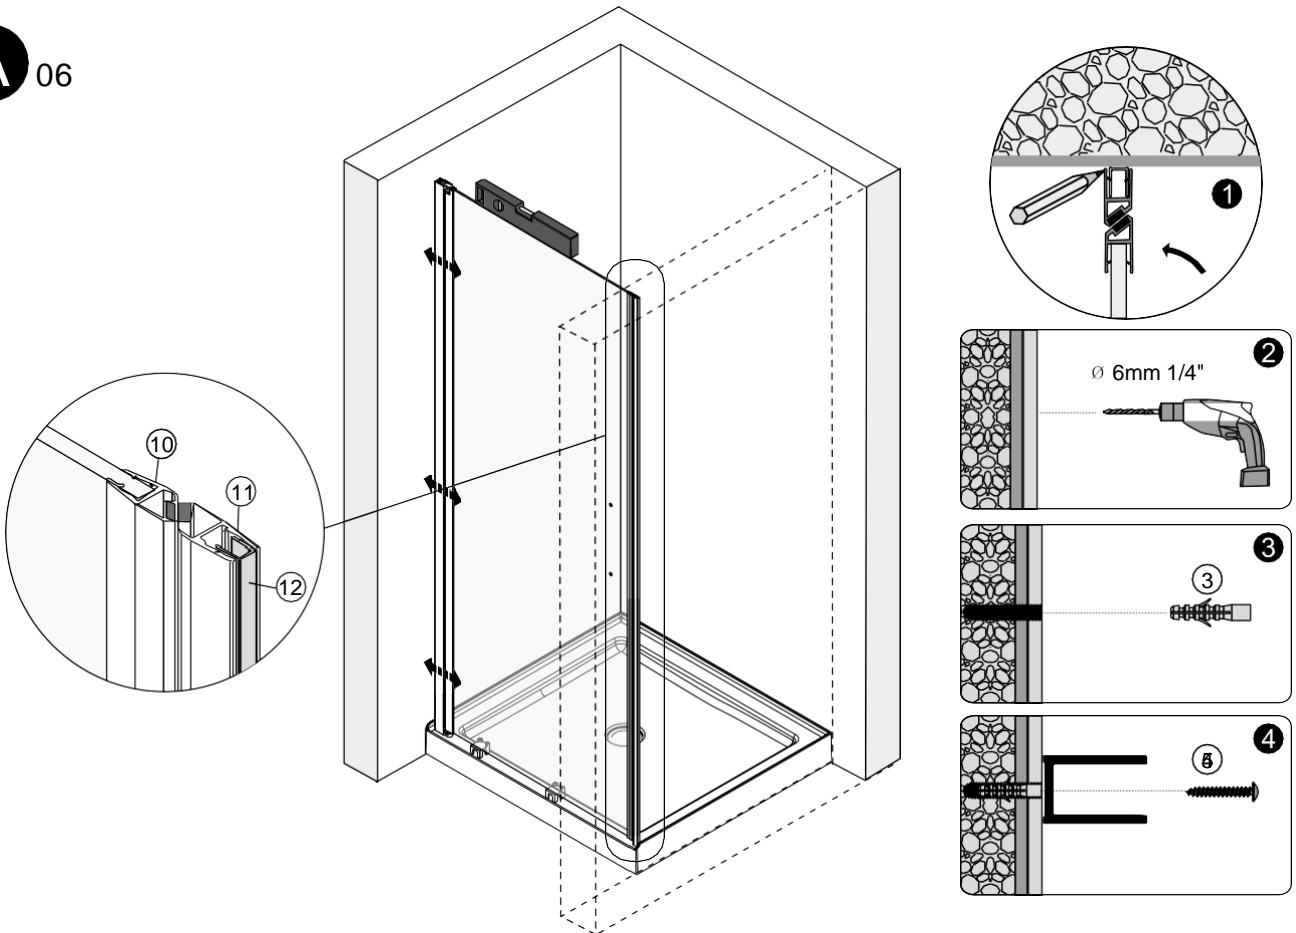


# SUITE / CONTINUED

**A** 07

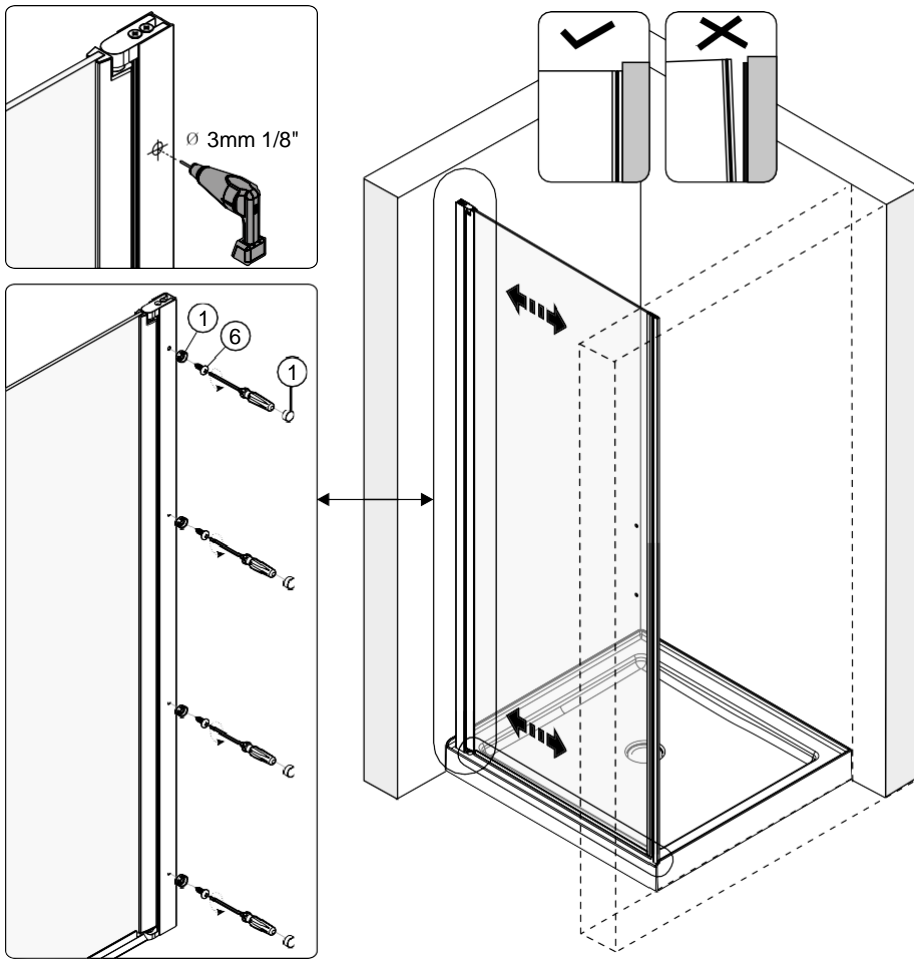



# SUITE / CONTINUED

**A** 08

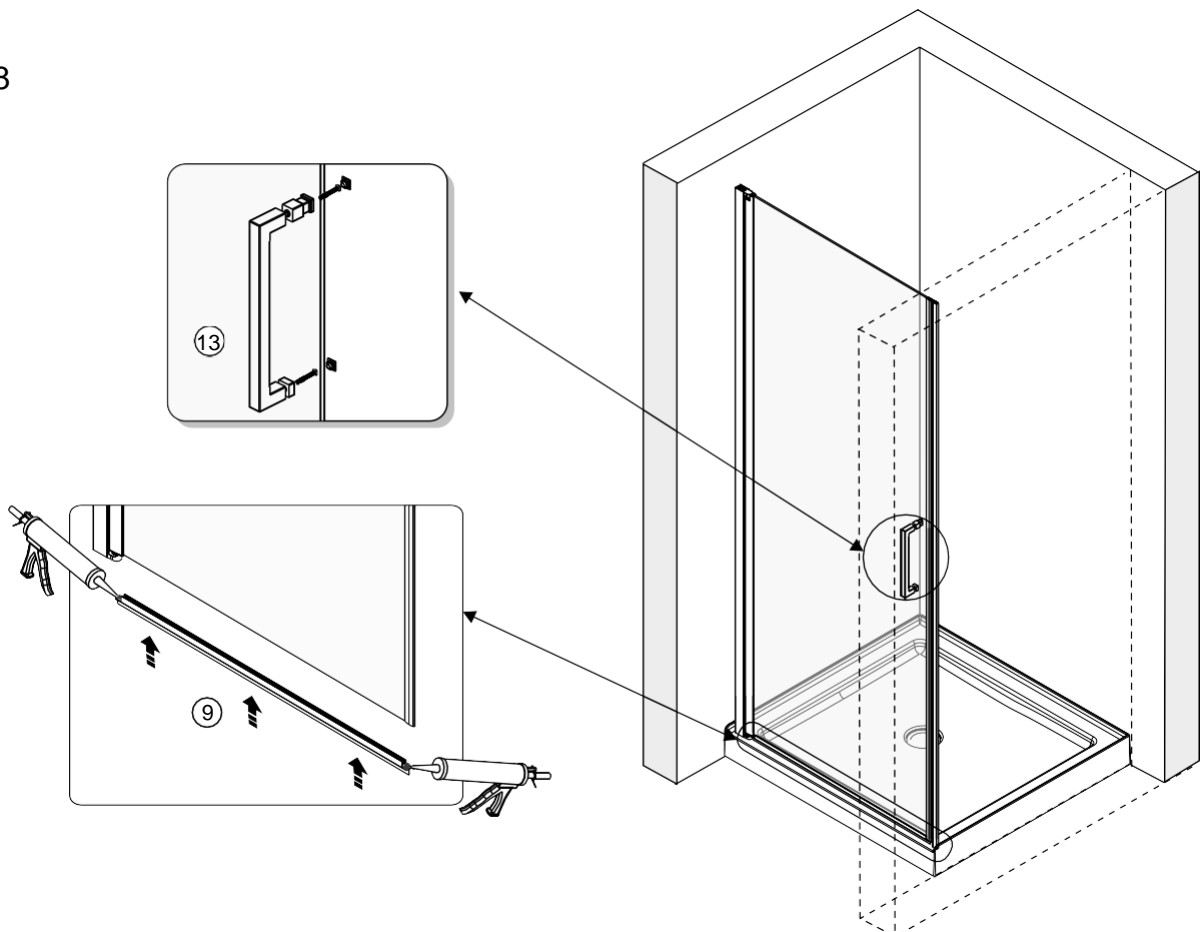




SUITE / CONTINUED

A 09

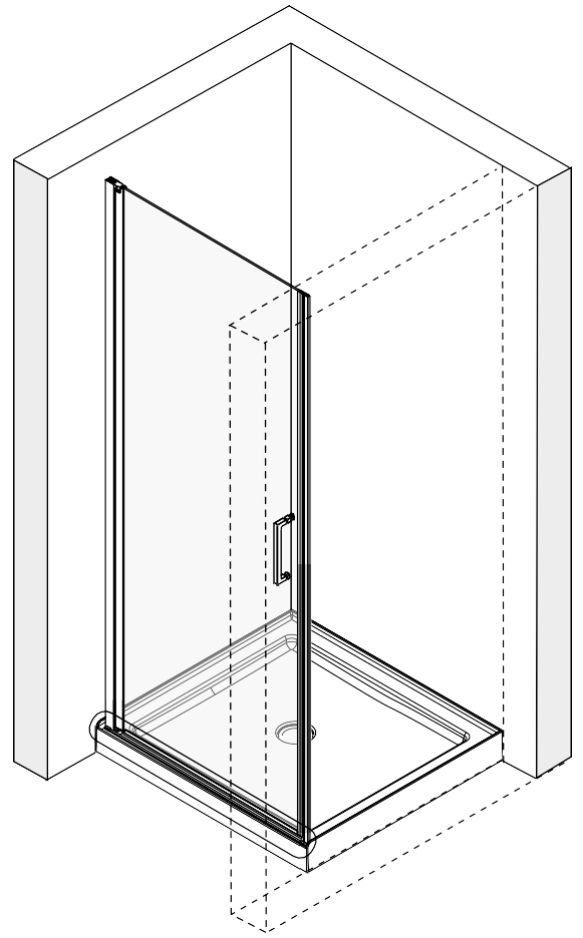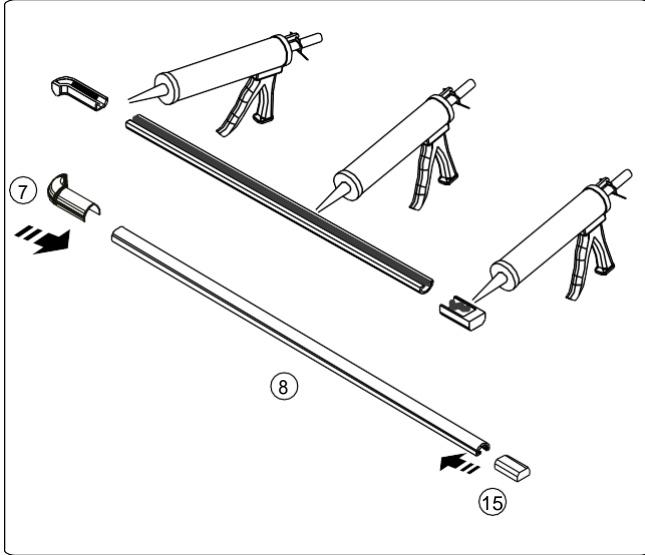

SUITE / CONTINUED


A 10

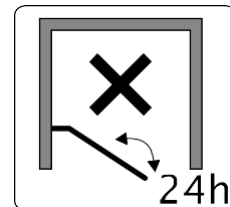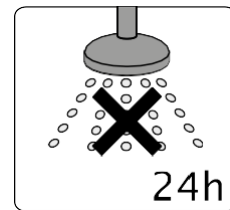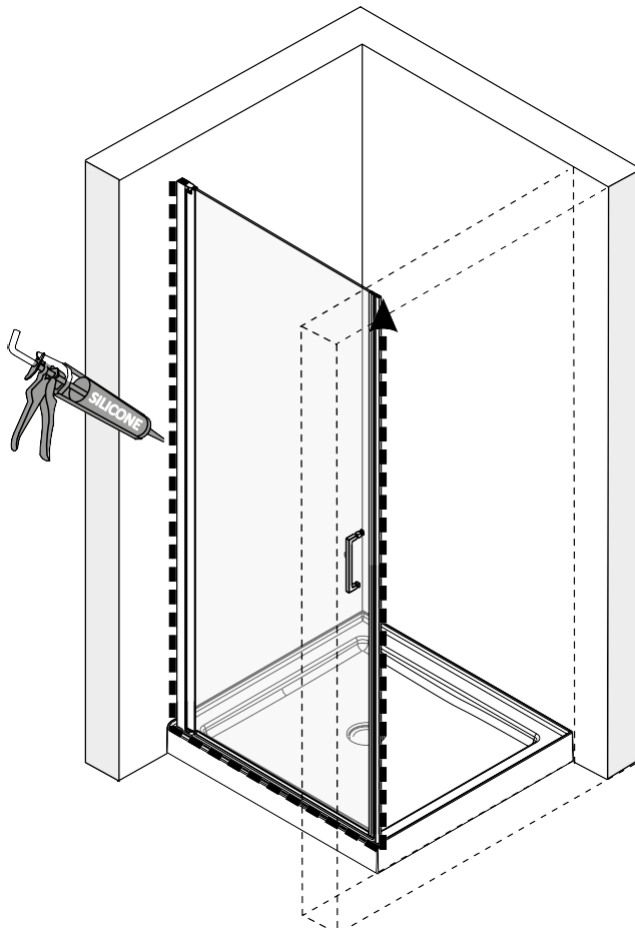



# SUITE / CONTINUED

**B**<sub>01</sub>





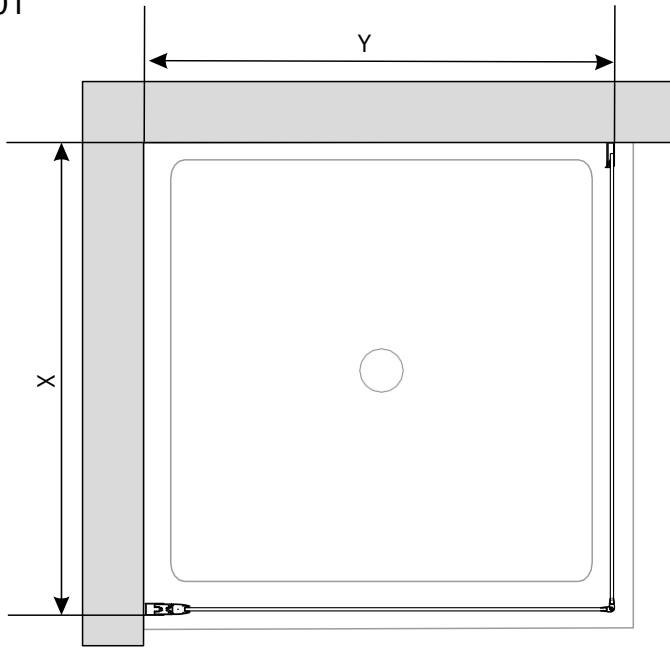


SIZE	Y
700mm	667-682mm
800mm	767-782mm
900mm	867-882mm

SIZE	X
800mm	780-800mm
900mm	880-900mm
1000mm	980-1000mm


# SUITE / CONTINUED

**B**<sub>02</sub>

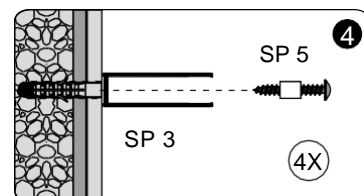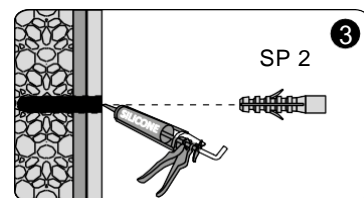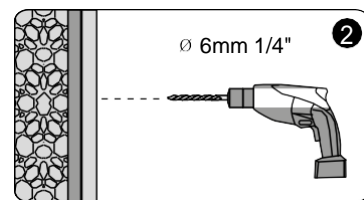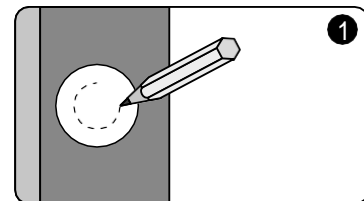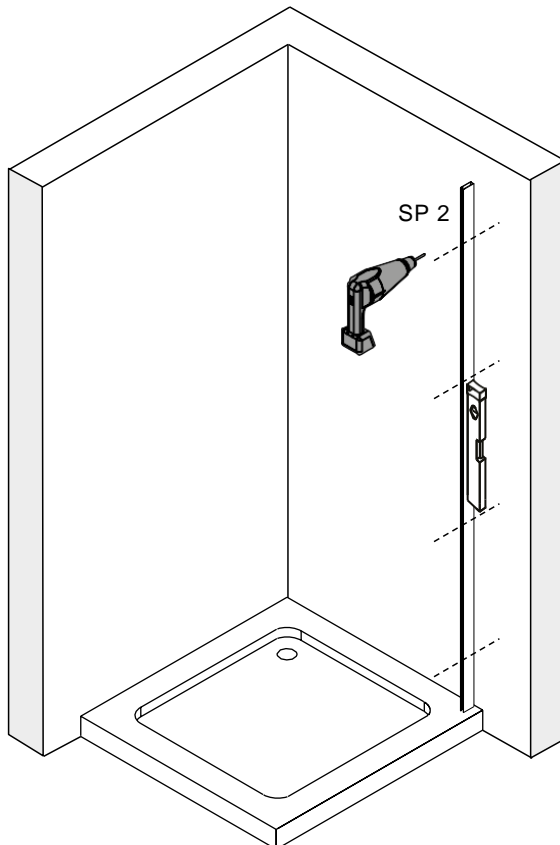


# SUITE / CONTINUED

**B** 03

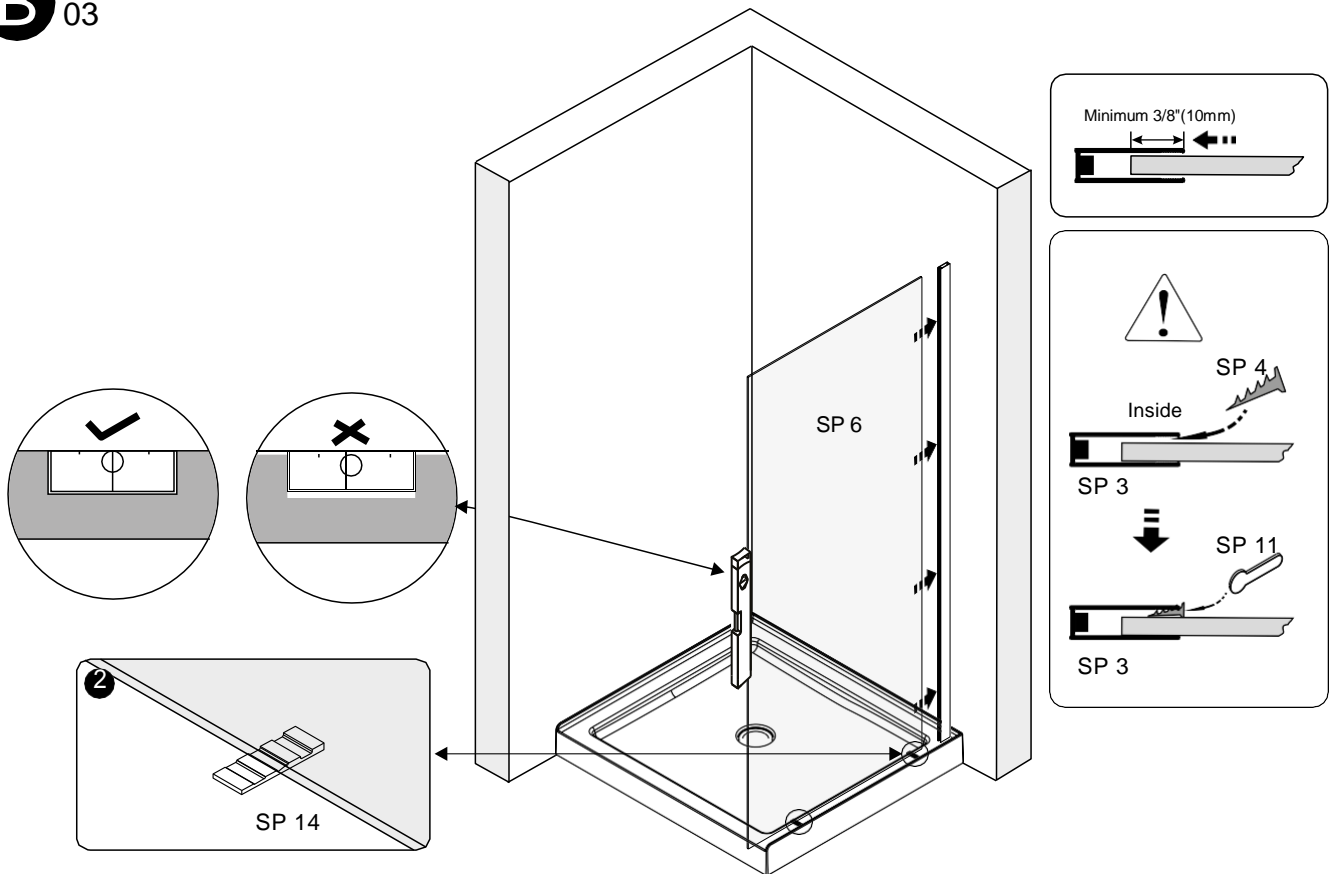


# SUITE / CONTINUED

**B** 04

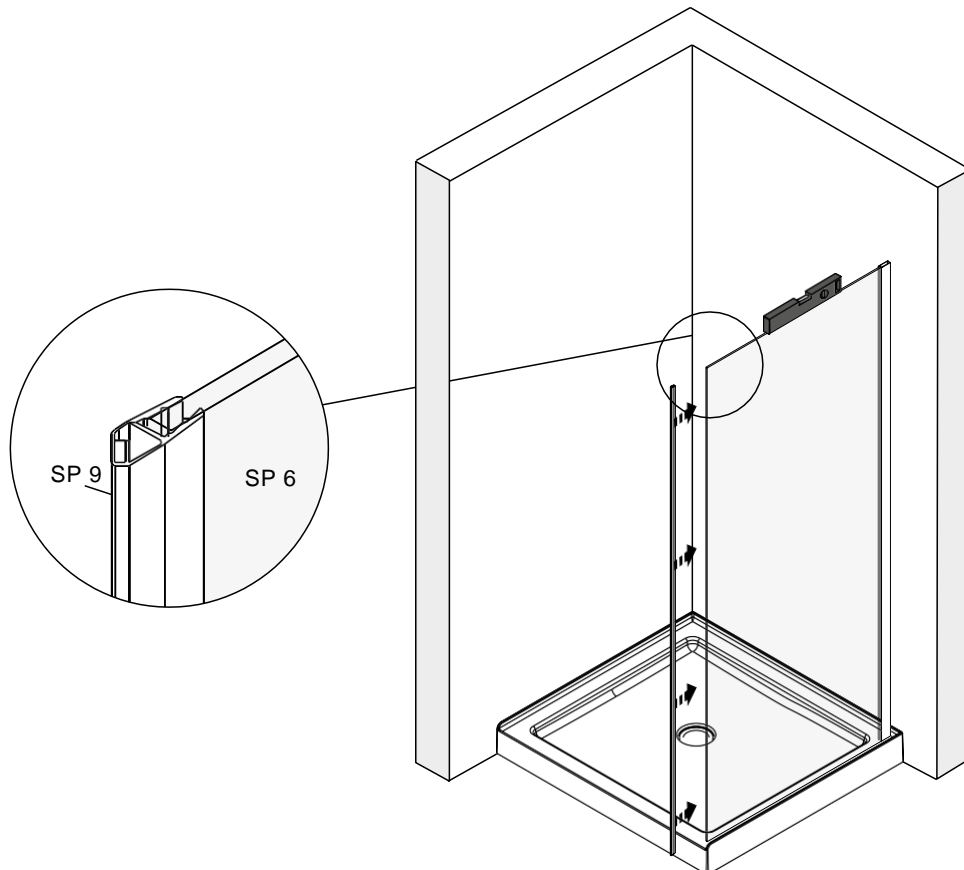


# SUITE / CONTINUED

**B** 05

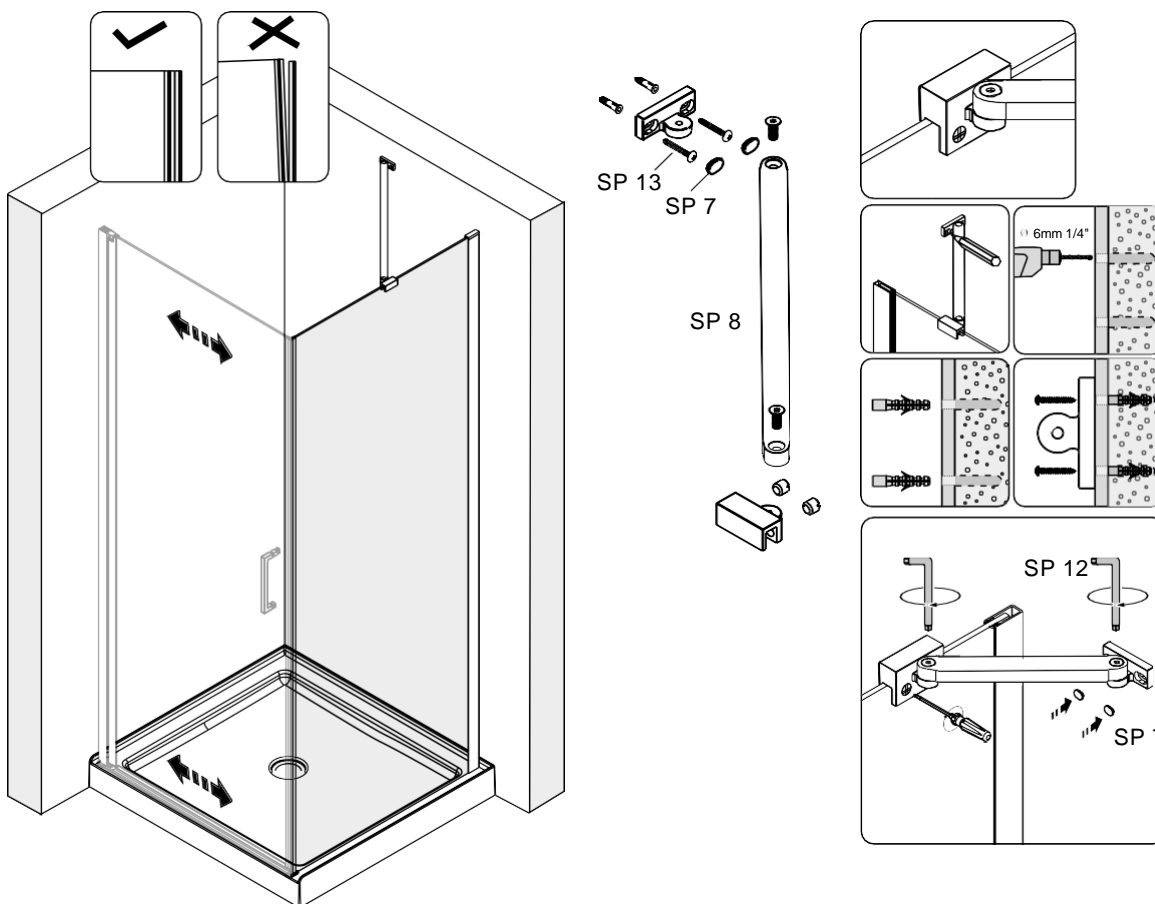

# SUITE / CONTINUED

**B** 06

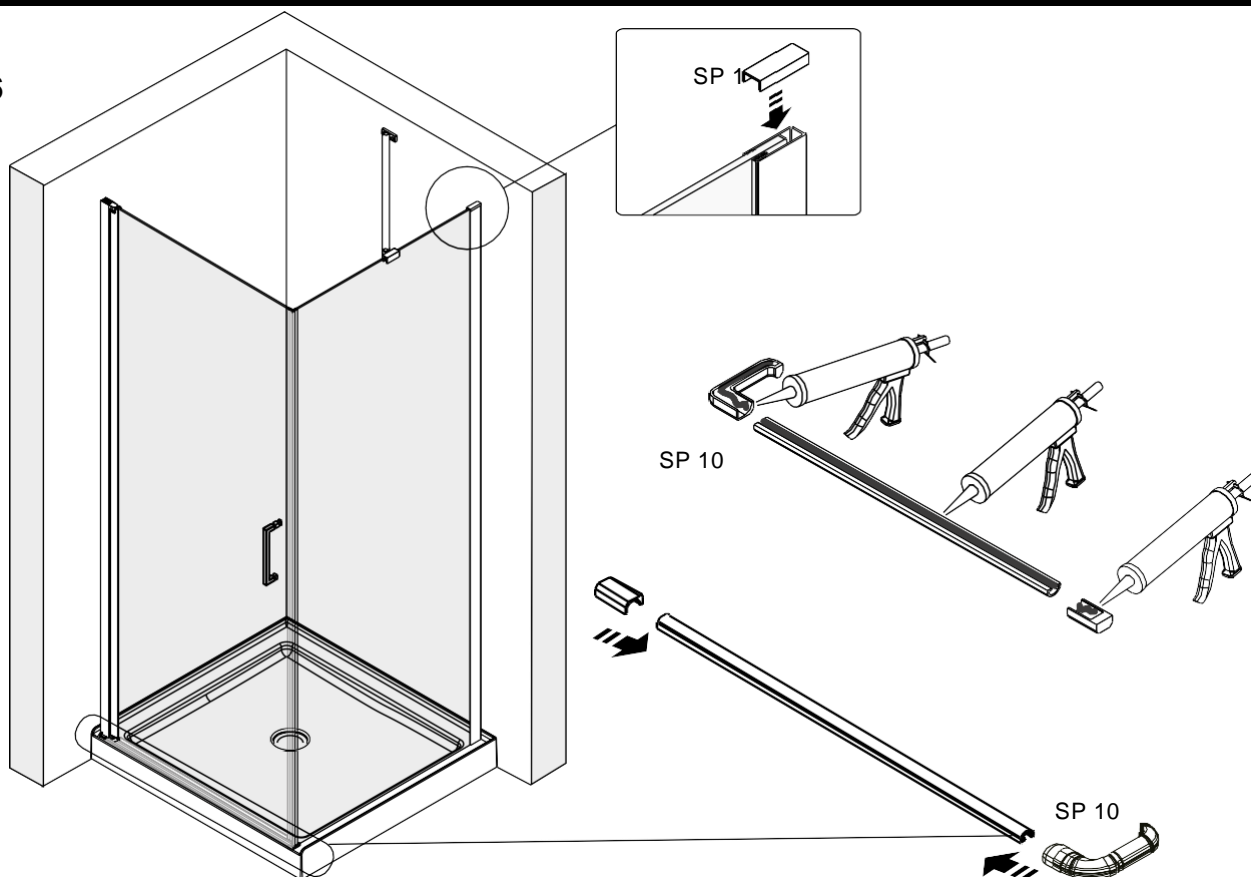

**B** 07

